

Head Exchange Instructions

1 Take out a head with key



Remove the head by counterclockwise twist

2 Clean a pocket



Blow air into the pocket to ensure it's clean and clear of any shavings

3 Assemble a head



Tighten by a clockwise twist