



Contents

Product Liability and Warranty	5
General	5
Warranty	6
Intended Purpose	6
Service	7
Symbols and Pictograms	7
Safety	8
Selection of the Installation Site	8
Risks Relating to Electrical Energy	8
Risks from Hot Parts	9
Protecting the Chuck Against Overheating	9
Risks Relating to Electromagnetic Radiation	10
Special Risks	10
Controls and Commissioning INDN AP Unit	11
Assembly	11
Power Supply of INDN AP Unit	12
Operating the INDN AP Unit	13
Operating Buttons	13
Display	13
Switching on the Device	14
Switching Off the Device	14

Shrinking	15
Basic Shrink-Fitting Information	15
Work Sequences when Clamping, Releasing Or Changing a Tool	16
General Advices	16
Clamping	16
Releasing	16
Change the Ferrite Disc	17
Shrink-Fit Operating Modes	18
SRKIN / SRK Clamping Chucks: PARAMETER	19
Shrinking with Free "Parameter" Selection: MANUAL	22
Define Your Own Parameters: TOOL MEMORY	25
List of Most Used Tools: FAVORITES	26
Configuration	27
Switching Between mm/ Inch	
Setting Up and Configuration of Cooling Time	
Setting Up of Cooling Time	
Configuration of Cooling Time	29
Configuration of Cooling Time for "parameter Shrinking"	29
Configuration of Cooling Time for "manual Shrinking"	29
Enter Start Delay	30
Enter Stop Delay	30
Password on/ Off Or Change	30
Reset List of Favorites	30
Service	32
Maintenance / Visual Inspection	33
Cleaning	33
Checking the Cooling Emulsion	
Filling/ Draining the Cooling Emulsion	
Draining the Coolant Tank	
Checking the Float Switch	
Replacing the Float Switch	34

Contacting TheManufacturer	35
Appendix	36
Error Messages and Corrective Measures	36
Technical Data	40
Available Additions Andoptional Accessories	42
Service Pump	42
Instructions Safety Glove	43
Mains Connections	44
EC Declaration of Conformity	45
Safety Data Sheets	46
Synergy 905	46
Techniclean MTC 43	50
Table of Fuses for 400V Units	58
Table of Fuses for 480V Units	58
Wiring Diagrams	59
Pneumatic Diagrams	63

Product Liability and Warranty

General

These operating instructions are part of the technical documentation for the induction device INDN AP UNIT.

These operating instructions are important so that the device can be used safely, correctly and efficiently. Observing these instructions will help to avoid risks, repair costs and downtimes, and will raise the general level of performance and the lifespan of the machine. The contents correspond to the constructional status of the INDN AP UNIT at the time these operating instructions were compiled. The construction and technical data is subject to changes due to continuous further developments and for customized models.

Therefore no claims may be made on the basis of the content of these operating instructions (details, charts, drawings, descriptions etc.). Subject to errors!

These operating instructions, in particular the Safety, must be read and observed by all persons who work with the device:

Operation

Including tooling, troubleshooting whilst working, clearing production waste, machine care, disposal of operating supplies and materials

Maintenance

Servicing, inspection, repairs

Transport

In addition to the operating instructions and the accident prevention regulations relevant in the country and the place where the device is used, the recognized technical rules relating to safe and professional work and the respective workshop-specific regulations must be observed.

If you have any questions, please do not hesitate to call us.

You can contact us at the address stated above.

If the reader discovers any printing errors, ambiguous information or inaccurate information in these operating instructions, please let us know.

Warranty

It is expected that the device will remain fully functional and safe. It is also expected that it will work accurately for many years; however this is only possible if the regulations governing the operation, maintenance, and repairs are observed in accordance with the manufacturer's guidance.

Any faults that occur during the warranty period will be remedied as defined in our warranty conditions. Unauthorized modifications and changes will immediately expire the manufacturer's warranty and all claims resulting from these will be the responsibility of the machine owner. This applies especially for those modifications that impair the safety of the device.

Warranty claims will only be honored if OEM spare and replacement parts are used.

These operating instructions are not a supplement to our terms and conditions of sale and delivery.


Intended Purpose

The induction device INDN AP unit is used for the thermal engagement and disengagement of tools in shrink chucks.

Any other use above and beyond this is deemed not in accordance with the intended use.

We will not be liable for any resulting damage. The operator bears the full risk.

Intended use also includes observing the operating instructions and compliance with the stipulated inspection and servicing intervals.

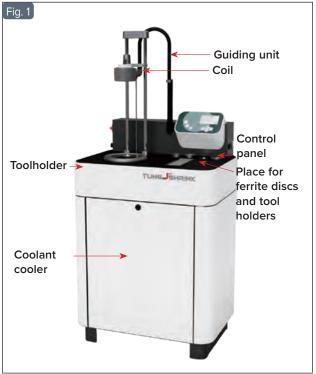

Induction INDN AP unit

Service

We will be happy to help solve problems or perform repairs and modifications that are not described in these operating instructions. For problems or queries, make note of the device and generator serial numbers. The device serial number can be found on the type plate on the left side panel, the generator serial numbers is on the right side of the black generator box.

Symbols and Pictograms

Warnings are marked by warning triangles with hazard symbols to warn about risks that could result in damage to property or personal injury.



Warning! Potentially fatal risk or risk of serious injury! Non-observance may lead to death or serious injury!



Caution! Risk of minor injury! Nonobservance may lead to minor injury!

Information!

Information about how to carry out an action effectively and to avoid damage.

Instructions

are marked by circles with hazard symbols or triangles with instruction specifying that an action needs to be carried out or that specific items need to be used.



Goggles Risk of damage to the eyes! Wear goggles! During the heating phase it is possible that parts of the heated metal surfaces split off and cause injuries!



Gloves Risk of injury!

Sharp edges or metal chips adhered to the tool can cause injury; therefore protective gloves must be worn!

Activities

are marked by the symbol > and state the action that needs to be carried out. The result of the activity may be stated beneath the symbol for clarification purposes.

Example:

- Lower coil
- Start shrinking process
- Remove tool

Safety

The induction generator has been built to comply with the state-of-the-art design at the time of delivery and is safe to operate. Nevertheless, there are still risks involved with operating the device if it is used by untrained or unqualified personnel or if it is not used as intended. Therefore, must be observed:

Please read the operating instructions carefully and familiarize yourself with the operating elements before commissioning and using the device!

The operating instructions are an integral part of the function of the induction generator and must be easily accessible, legible and available in full to all persons who work with the system.

The device may only be operated by trained and competent personnel!

The device may only be used for its intended purpose and only when it is in a fully functional state!

The induction generator is designed and suited for shrink chucks. Problems may arise when unshrinking/ shrink-fitting other chuck types leading to damage to the chucks or to the induction device itself.

All unauthorized modifications will immediately expire the manufacturer's

warranty. The operator bears the sole risk of injury to the user or third parties and for any damage to the induction generator or other elements of the device!

Selection of the Installation Site

The INDN AP unit is designed as a standalone or tabletop device and must be positioned safely in a dry and clean place which is not exposed to vibrations.

Protect against dust, dirt and splash water!

Avoid direct sunlight to improve the legibility of the control panel.

Risks Relating to Electrical Energy

The device has live parts inside which are dangerous if touched.

Please observe the following safety points:

- The device must not be operated when the housing is open!
- The device must only be opened by our service personnel or under strict manufacturer's guidance!
- Keep the device clean. Clean regularly!
- Never use compressed air to clean the machine or chucks nearby the machine, to prevent chips from being forced to electronics circuits

Risks from Hot Parts

The very effective heating function only heats the relevant surface zones of the chuck with the lowest heat input possible. The surface of the heated chucks reaches temperatures of up to 400°C. The coil and the cutting tool hardly heats up at all when operated properly.



Caution! Risk of injury caused by burns from hot parts!



As a result of the shrinking process the heated tool assembly radiates heat.

Therefore, the heated chuck must be cooled in a timely manner to avoid risk of injury and damage to the coil!



Ensure that only shrink-fit chucks are used. There is a risk of injury if other chucks, especially hydraulic clamping chucks, are heated up!

Do not interrupt the automatic cooling of the shrink chuck following the shrinking process!

For your own safety, follow the safety instructions below when working with the device:

- The device may not be operated in an explosive environment!
- Do not use easily ignitable, solventbased, or corrosive cleaning agents!
- Ensure that hot parts cannot be touched accidentally!
- Always wear the gloves supplied when unshrinking/ shrink fitting the tools to protect your hands from burns and cuts!
- Place hot tools on non-flammable, heat-resistant surfaces!
- Apart from the chuck and the tool, do not allow any metal objects inside the induction coil as these will also become hot!
- Never reach into the heating area of the coil during operation as rings or chains can also heat up very quickly!
- Always wear protective eyewear during shrinking! Bits of the tools or chuck can break off during the heating process and cause injuries!

Protecting the Chuck Against Overheating

If the shrinking process is too long or if the chuck is reheated several times within a short period without correct cooling, the chuck and tool may overheat. Therefore, always keep the heating times as short as possible during shrink fitting.

Avoid overheating the chuck or repetitive cycles without correct cooling times!

Never re-heat a chuck that has not cooled down to room temperature.

April 2025

Risks Relating to Electromagnetic Radiation

If used correctly, the device does not emit any electromagnetic radiation that is dangerous to its environment. The radiation safety of the system is checked and verified through tests performed in accordance with EC Machinery Directive (EC Declaration of Conformity, page 45).



The shrinking process must not be operated without the ferrite disc being inserted!

If the induction heating is started when there is no ferrite disc being inserted in the coil, the magnetic field also affects the area close to the coil.



The shrinking process must not be operated without chuck being inserted!

If the induction heating is started when there is no chuck in the coil, the magnetic field also affects the area close to the coil.



Warning! Potentially fatal risk for people with implants, especially with pacemakers!



If you have an implant, in particular a pacemaker, keep at least 3 m away from the device until you have checked with the manufacturer or your doctor that the implant is not affected by the induction field.

Special Risks

Crushing and cutting hazards in the opening range of the cooling unit!



Never reach into the opening of the cooling unit!

The automatic lifting after cooling can cause crushing and cutting at the opening edge.



Risk of crushing and cuts in the coil's range of motion!

Ensure that no parts of your body or objects are in the range of motion of the coil whilst the induction device is operating. The weight of the coil can cause crushing injuries and cuts in connection with the cutting tools.

Damage of the coil and/ or the electric installment

By using Non IMC group holders large shrink chucks, the hot chuck may touch the coil and destroy the isolation. In case of any damage of the coil and/ or the electric installment, the device has to be stopped immediately and the manufacturer has to be contacted.



Do not operate the machine with a damaged coil, high voltage is present inside.

Controls and Commissioning INDN AP Unit

Assembly



Caution:


Please inspect the unit for shipping damages prior to assembly.
Ensure that the unit is not damaged during the unpacking process.

In particular, the cable system must not be bent or twisted out of its position of movement! Handle the unit with care.

Comply with the order of assembly!

Setting up the unit

Choose a suitable place for the unit. The unit possesses three non-height adjustable feet and one height adjustable foot (see Fig. 5).

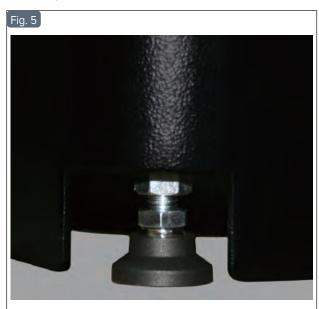

Height adjustable foot

Twist up or down the height adjustable foot so that the unit stands firm and tighten with the counter nut.


Mounting the guide unit



Inserting the guide unit in the machine

Place the guide unit sub-assembly in the bores and fasten with the two enclosed screws (**DIN912** M6x20, see Fig. 6).

The PE screws at the side must be fastened tightly. (Fig. 7)

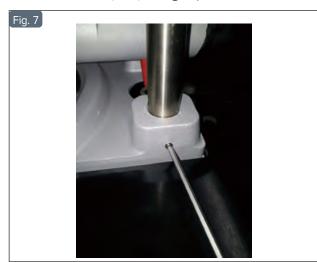

Aligning the coil

Release lightly the screws of the connector unit.

Insert a shrink-fit chuck with the shrunken tool into the corresponding tool holder and an adequate ferrite disc and the clamping ring into the coil to align the connector unit with help of the shrink-fit chuck.

Then tighten the two fastening screws of the connector unit.

Connecting the compressed air supply



Compressed air must be oil-free!

The compressed air supply must be connected properly to the unit.

The pneumatic connection of the unit is located on the left hand side.



Pneumatics connection

Power Supply of INDN AP Unit

- Setting up the power supply
- For the 400V model, this is done by a preassembled (CEE-CEKON) plug-in connector.
 Just plug it into your wall outlet or transformer.
- For the 480V model, we recommend to connect it to a fused disconnect, with J-type fuses installed.

Operating the INDN AP Unit

Operating Buttons

All the work and adjustment processes are carried out at the operator panel using 7 keys:

Button	Button	Function
Button	name in text	T direction
O START	Start	Start the inductive heating of the shrink-fit chuck
O STOP	Stop	Stop the inductive heating of the shrink-fit chuck Acknowledge error messages Interruption of Start Delay or Stop Delay Manual up/ down of the coil (press for at least 1 sec)
COOL	Cool	Start manual cooling process
•	up ▲ ▼ down	Select various menu items Change values and settings
ОК	OK	Confirm to the selection or the setting
ESC	ESC	Return into the preceding menu

Display

All the possible selections, menus and messages for the operator are shown on the display as symbols.

The individual menus contain points of selection or input fields. A further menu is branched through moving the selection points with the arrow buttons up ▲ and ▼ down and by confirming with OK

If an input box is skipped in a menu, then a leap is made to the last input value. The values are modified using the up ▲ and ▼ down buttons and confirmed by pressing OK.

You can always skip to the preceding menu using ESC.

Switching on the Device

Switch on the main switch

The display shows the type of the machine. Now you are in the main menu.



After selecting **Shrinking** or **Service** and pressing the **OK** button, the compressed air is switched on.



The linear unit moves down initially and then upwards. If no coil is fitted, the carriage quickly moves upward due to the lack of weight!



The same time, also the lifting unit moves down first and then up again.

The unit is at home position and ready for use now.

Switching Off the Device

In order to avoid damage, the unit must not be switched off when the coil is raised. The unit must be switched off as follows:

- Remove the chuck from the location
- Lower the coil by continuous pressing of the **Stop** button
- Switch off at the main switch

Shrinking

Basic Shrink-Fitting Information

Only tools with a ground shank and tolerance h4, h5 or h6 should be used. Tools with shank tolerance h7 cannot be securely clamped.

The following shank tolerances are required for the various shank diameters:

Shank Ø	Shank Tolerance	Type of Tool
3mm	h6	CARBIDE
4mm	h6	CARBIDE
5mm	h6	CARBIDE
≥ 6mm	h6	CARBIDE and HSS

If a wrong coil and ferrite disc are used, the ferrite disc can cause damage to the tool cutting edge. The diameter of the ferrite disc bore is 2.5mm larger than the largest tool diameter that the disk is designed for. In the case of IMC group clamping chucks, the ferrite disc lies on the end face of the chuck which ensures that the coil is correctly positioned in relation to the chuck, even for extended clamping chucks. It is not possible to position slender shapes above the clamping chuck end surface. In this case, you require the coil limit stop INDN AP COIL LIMIT STOP available as an optional accessory (see options Coil limit stop, page



After the heating cycle, the shrinkfit chuck must not be touched by the operator until it has completely cooled down using the integrated direct coolant cooling. If it is necessary to handle the hot shrinkfit chuck for special processes, this must only be carried out using protective gloves. Shrinking chucks should only be touched with gloves and only at the collar and not in the heated area. The maximum touching time should not exceed 5 sec. even when using a protection glove.

Ensure that the chucks stand straight and are secure in the tool holders. Even though the shrinking of tools with Weldon, Whistle notch or similar shanks with non closed cylinder geometry is possible, cylindrical shanks such as **DIN1835** Form A are preferred, as these enable a greater holding force and the smallest amount of imbalance.



Please ensure that the tool shanks used are not damaged in the clamping area.

To achieve the best possible clamping forces only insert clean, grease-free shafts in the chuck. Ensure that there are no cutting flutes in the clamping area when deciding on the clamping depth.

Work Sequences when Clamping, Releasing or Changing a Tool

For your own safety, please observe the following rules when working with the unit:



Always observe the safety instructions for all shrink-fit processes!

The cooling can be operated manually at any time through pressing the **Cool** button.



Use safety gloves!

Shrinking chucks should only be handled with gloves and only at the collar and not in the heated area. The maximum contact time should not exceed 5 sec. even when using a protective glove.



Wear safety goggles!

General Advices

Select the respective tool holder (see Available additions and optional accessories, page 52) for the chuck and place this on the footprint.

Insert the chuck into the tool holder.

When the shrinking menu is selected you get an overview of all shrinking functions.

Clamping

By pressing on the tool during the subsequent heating phase you assist the clamping process.

If the tool has been inserted and the shrinking time has not yet ended, it is helpful to end the heating process with the **Stop** button, so as not to continue to heat the tool unnecessarily.

By pushing the **Cool** button, the cooling cycle can be started.

The chuck is lowered and cooled down with coolant. Afterwards the coil is moved into upper position. After the cooling period, the chuck is driven upwards slowly and dried with compressed air.

Afterwards the chuck can be removed by the operator.

Releasing

By pulling on the tool during the subsequent heating phase you assist the releasing process.



Place the removed tool on a heat resistant surface and protect people from accidentally touching the tool and the hot clamping chuck.

If the tool has been released and the shrinking time has not yet ended, it is helpful to end the heating process with the **Stop** button, so as not to continue to heat the tool unnecessarily.

By pushing the **Cool** button, the cooling cycle can be started.

The chuck is lowered and cooled down with coolant. Afterwards the coil is moved into upper position. After the cooling period, the chuck is driven upwards slowly and dried with compressed air. Afterwards the chuck can be removed by the operator.

Change the Ferrite Disc

Ensure that there is no chuck beneath the coil.

Press the **Stop** button for approx. 1 sec. The linear unit moves into the lower position and it is easier to change the disc.


Press the clamping ring together and remove it from the coil. After that you can take the ferrite disc from the coil. Select the correct ferrite disc suited to the correct shank-Ø into the coil.

See also Table of factory defined parameters, page 25.

After that fix the ferrite disc on the top of the coil housing with the clamping ring.

Press the **Stop** button again for approx. 1 sec and the linear unit moves back upwards.

Shrink-Fit Operating Modes

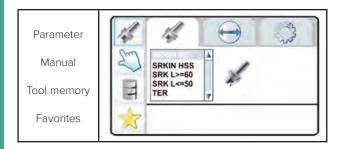

Parameter	Manual	Tool Memory	Favorites
, if you use a SRKIN / SRK	, if you use another chuck	, if you use chuck of	, if you use a table of
chuck. The parameters	or tool and want to adjust the	your own with shrinking	the most shrunk tools.
shrinking time and shrinking	shrinking parameters yourself.	parameters of yourself.	
output power are programmed			
for the SRKIN / SRK-chuck.			

Select with $\mathbf{up} \blacktriangle$ and \blacktriangledown **down** the desired function and activate with OK.

SRKIN / SRK Clamping Chucks: PARAMETER

The necessary parameters for the SRKIN / SRK chuck such as the generator output power, heating period, cooling time, disc sizes for the chuck type are programmed in the factory equipment of the SRKIN / SRK (see 5.5.1.1, Table of factory defined parameters, page 25).



Attention: for SRK shrink-fit chucks only shrink in carbide tools!

Step 1: Select chuck type

Select with **up** ▲ and **▼ down** the desired chuck type


Activate with **OK**.



Step 2: Select diameter

Select with up ▲ and ▼ down the according diameter

Activate with OK.

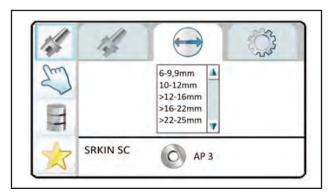


The status (bottom line) shows type of the chuck, and assigned ferrite disc.

Step 3: Additional options

Select with $\mathbf{up} \blacktriangle$ and $\blacktriangledown \mathbf{down}$ additional options and activate or deactivate with \mathbf{OK} .

The status (bottom line) shows the type of chuck and the assigned shrinking time and output power.

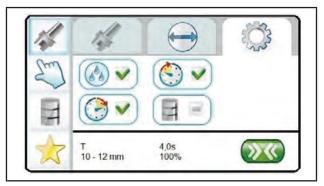



The blinking symbol shows the device is ready for shrinking



Deselecting the automatic cooling, This option is always set active after every shrinking. Other options see Setting up and configuration of cooling time, page 28



Start Delay Delay of the beginning of the shrinking. See Enter Start Delay page 30



Stop Delay (Dwell time) Delay of the beginning of the cooling process. See Enter Stop Delay, page 30



- Start shrinking with Start
- The water cooling is checked before the heating up of the chuck.
- The coil moves down automatically.
- The operation steps are shown on the display by a progress bar.

Table of factory defined parameters

SRKIN- Chucks (Standard Type According to DIN69882-8) Designation of Chuck SRKINxxxx Solid Carbide Shank				
Ø-Range In mm	Ø-Range In Inches	Ferrite Disc	Shrinking Time In Sec	Shrinking Output Power in %
6 - 9,9	1/4 — 5/16	INDN AP DISC 6-12 #1	4,0	95
10 – 12	3/8	INDN AP DISC 6-12 #1	4,0	100
> 12 - 16	1/2 – 5/8	INDN AP DISC 14-20 #2	4,0	100
> 16 – 22	3/4	INDN AP DISC 14-20 #2	6,0	95
> 22 – 25	1	INDN AP DISC 25-32 #3	9,0	100
> 25 – 32	> 1 - 1.1/4	INDN AP DISC 25-32 #3	8,2	100

SRKIN- Chucks (Standard Type According to DIN69882-8) Designation of Chuck SRKINxxxx HSS Shank

	Designation of Chack Skkinxxxx H33 Shalik				
Ø-Range In mm	Ø-Range In Inches	Ferrite Disc	Shrinking Time In Sec	Shrinking Output Power in %	
6 - 9,9	1/4 - 5/16	INDN AP DISC 6-12 #1	6,0	95	
10 – 12	3/8	INDN AP DISC 6-12 #1	6,0	100	
> 12 - 16	1/2 – 5/8	INDN AP DISC 14-20 #2	8,0	95	
> 16 - 22	3/4	INDN AP DISC 14-20 #2	8,0	100	
> 22 – 25	1	INDN AP DISC 25-32 #3	10,0	100	
> 25 – 32	> 1 - 1.1/4	INDN AP DISC 25-32 #3	8,2	100	

SRK/ER SRK - LBX/NL ≥ 60- Chucks (Slim Design) Designation of Chuck SRK/ER SRKxxxx

Ø in mm	Ø in Inches	Ferrite Disc	Shrinking Time In Sec	Shrinking Output Power in %
3	1/8	INDN AP DISC SRK3-5 #5	3,0	60
4	5/32	INDN AP DISC SRK3-5 #5	3,0	25
5	3/16	INDN AP DISC SRK3-5 #5	3,0	28
6	1/4	INDN AP DISC 3-5 #0	3,0	38
8	5/16	INDN AP DISC SRK8-10 #8	3,0	43
10	3/8	INDN AP DISC SRK12 #12	3,0	53
12	1/2	INDN AP DISC SRK12 #12	4,0	43

SRK/ER SRK - LBX/NL ≤ 50- Chucks (Slim Design) Designation of Chuck SRK/FR SRKxxxx

Designation of Chuck SRK/ER SRKxxxx				
\varnothing in mm	Ø in Inches	Ferrite Disc	Shrinking Time In Sec	Shrinking Output Power in %
3	1/8	INDN AP DISC SRK3-5 #5	3,0	60
4	5/32	INDN AP DISC SRK3-5 #5	3,0	60
5	3/16	INDN AP DISC SRK3-5 #5	3,0	60
6	1/4	INDN AP DISC 3-5 #0	2.5	75
8	5/16	INDN AP DISC SRK8-10 #8	2,0	80
10	3/8	INDN AP DISC SRK12 #12	4.5	70
12	1/2	INDN AP DISC SRK12 #12	6,0	75


Shrinking with Free "Parameter" Selection: MANUAL

This mode is intended for shrinking special tools or special clamping chucks, which only occur in seldom cases. Furthermore, this mode can be used to set the shrinking parameters for frequently used special chucks or tools.



Select with up ▲ and ▼ down the function "MANUAL" and activate with OK.

Step 1: Select shrinking time

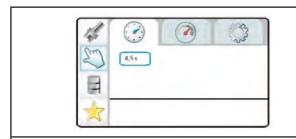

Select with up \triangle and ∇ down the desired shrinking time in steps of 0.5 s (0 - 60 s) Activate with OK.

Step 2: Select shrinking output power



Select with up \triangle and ∇ down the desired output power in steps of 5% (5% – 120%) Activate with OK.

Step 3: Additional options



Select with up ▲ and ▼ down additional options and activate or deactivate with OK.

The status (bottom line) shows the selected shrinking time and output power.



The blinking symbol shows the device is ready for shrinking

Following options are possible



Deselecting the automatic cooling, This option is always set active after every shrinking. Other options see Setting up and configuration of cooling time, page 28



Start Delay Delay of the beginning of the shrinking. See Enter Start Delay, page 30



Stop Delay (Dwell time) Delay of the beginning of the cooling process. See Enter Stop Delay, page 30

Step 4: Start shrinking

- Start shrinking with Start
- The water cooling is checked before the heating up of the chuck.
- The coil moves down automatically.
- The operation steps are shown on the display by a progress bar.

By delivery of the unit the manual shrinking procedure is enabled. The manual shrinking process can be disabled in the configuration menu. See Lock shrinking operation, page 40.

There is also a possibility to carry out the shrinking process using the **Start** button when the heating time = 0 seconds is selected. The chuck is heated with the set output power for as long as you press and hold this button.

The shrinking process is ended after releasing the **Start** button and the cooling process can be started.

If the heating energy selected (time x output power) is too high, the shrink-fit chuck and/ or the tool can easily overheat. In serious cases, permanent damage can occur to the chucks and tools. Please therefore ensure the following is observed:



If the suitable parameter is not known, begin with small values for the time and output power and increase them until the clamping and releasing functions work perfectly!

- Especially for smaller tools, do NOT increase the heating time by one second at the same power setting. Instead, increase it by 1s and reduce the output power by 20% at the same time. The product of power x time is the energy input. If a cycle at 3s and 100% (3x1=3) is not successful, increase to 4s/ 80% (4*0.8=3.2) and so forth.
- Allow the chuck and tool to cool to room temperature before any new heating cycle is started! Ensure that the coil is suitable for the chuck and the tool.
- An internal check of the coil cannot be carried out in this case. Therefore ensure that the coil is suitable for the chuck and the tool. To do this, check that the clamping area of the chuck fits in the coil, the coil ferrite disc touches the end face of the chuck (or is at least only a very short distance apart) and that the tool has sufficient clearance in the ferrite disc bore so that the cutting edge cannot be damaged! If you notice that the chuck, tool or coil heat to very hot temperatures, interrupt the process immediately using the **Stop** button and check the shrinking parameters!

Guidelines for experimentally determining the necessary shrinking parameters for special chucks and special coils

1) Basic settings:

	Shrinking Output Power in %	Shrinking Time In Sec		
Special chucks and HSSE/ CARBIDE tool shafts	100	2		
Special chucks and CARBIDE tool shafts	70	3		

2) Sequence:

Insert tool shank in the counterbore and start the shrinking process.

- a) If the tool slides **completely** in the chuck bore: Use the current values of Heating time and Output Power as suitable shrinking parameters.
- b) If the tool does **not** slide into the chuck bore:
 Increase the shrinking time T in steps of 1s and then repeat the shrinking process until the tool shaft completely slides into the chuck bore. It is important to ensure that the shrink-fit chuck is cooled down to room temperature before each further shrinking attempt.
 Then accept the last selected shrinking parameters Heating time and Output Power.
- c) The tool shaft only slides **partially** in to the shrinking chuck bore and is thus not correctly gripped during cooling process. Allow the chuck to completely cool down to room temperature and increase the shrinking time T in steps of 1s, shrink and try to pull out the tool. Repeat this step until the tool can be easily removed from the heated chuck. It is important to ensure that the shrink-fit chuck is cooled down to room temperature before each further heating cycle is started. Once successful, accept the last selected parameters for Heating time and Output Power and store them to memory.

Shrinking with coil limit stop INDN AP COIL LIMIT STOP

There is a possibility that with slim clamping chuck designs or special chucks, that the coil cannot be positioned through its cover disk. In that case you should use the coil limit stop which can be obtained as an accessory (page 53).

The coil limit stop is mounted around the guiding rod and locked with the locking screw.



Take care that the stop – when not needed – is removed and that the coil does not stop at the wrong position unintentionally.

In order to position the coil limit stop, put a chuck in its tool holder in the shrinking position below the coil. The coil is in the correct position if the ferrite disc nut is on a level with the front side of the clamping chuck. Now position the coil limit stop so that the coil will be stopped at that position when going automatically. Lock the stop in this position with the locking screw.

Define Your Own Parameters: TOOL MEMORY

Setup TOOL MEMORY at the machine

At the beginning, a similar standard chuck is selected from the existing parameter list.

Start with mode PARAMETER similar to standard shrinking

It is important to define the coil and disc for the new chuck.



Manual mode must be enabled (see Lock shrinking operations, page 31)



Selecting the option "memory" will switch into manual mode.

The actual parameters (shrinking time and power) are copied and can be changed now (see Shrinking with free "Parameter" selection: MANUAL, page 22).

After selecting you come to the manual shrinking mode. The desired parameters may be tested by shrinking and can be adjusted again until they are perfect.



Selecting the option "memory" will save the actual time, power and all other options. The predefined coil and disc will also be saved into a new set of parameter data.

The new set of data is named like the original tool designation heading with an additional letter "M" and a digit.

For e.g., if a chuck similar to SRK with D=8 mm is desired, the new set of data will have the designation "M1 SRK08". A second set of data with the same chuck as origin will have the designation "M2 SRK08.


The function "TOOL MEMORY" is enabled now and all sets of own defined shrinking parameters are available.

The names are fixed and can not be changed at the operating panel.

To quit the manual mode without activating the option "memory" stop the function without memorizing the new set of data.

List of Most Used Tools: FAVORITES

A top-ten list of the most used tools is directly available with the function "Favorites".

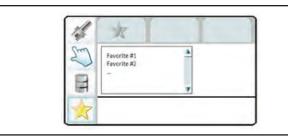

Select with up ▲ and ▼ down the function "FAVORITES" Activate with OK.




A list of the most used tools appears Select with up ▲ and ▼ down the desired tool Activate with OK.



The menu shrinking will be selected immediately Continue as described in SRKIN / SRK clamping chucks: PARAMETER.

Configuration


With multiple pressings of **ESC** you come to the main menu.

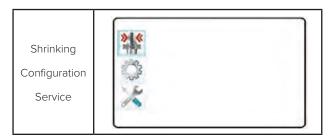

Select with $\mathbf{up} \blacktriangle$ and $\blacktriangledown \mathbf{down}$ the function Configuration and activate with OK.

If the **Configuration** is protected by a password you have to enter it first.

How to activate/ deactivate the password see Password on/ off or change, page 30

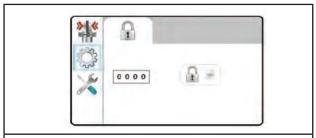

You can increase or decrease the numbers with up \blacktriangle or \blacktriangledown down.

Confirm with OK and go to the next decimal figure of the password.



Once all 4 numbers are correct (for e.g. 3480) confirm the password with OK.

When a wrong password is entered you have to repeat the input.




If the password is correct, the following appears in the Configuration display
Select the options with up ▲ and ▼ down and activate with OK.

If the symbol "Manual Shrinking" does not appear, you first have to define a password. See Password on/ off or change, page 30.

Switching Between mm/Inch

The diameter of the tool can be shown on the display in mm or in inches.

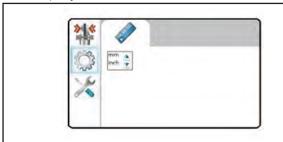


Select the desired unit with up \blacktriangle and \blacktriangledown down and confirm with OK.

Setting Up and Configuration of Cooling Time

If only the symbol "cooling" appears, you have to enter a password first.

See Password on/ off or change, page 30.

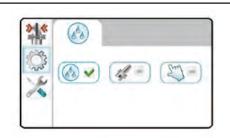


Select the functions with up \blacktriangle and \blacktriangledown down and activate with OK. The active function is marked with and confirmed with OK.

Setting Up of Cooling Time

The cooling time can be extended to a maximum of 200 % of the factory setting.

A cooling time less than 100 % is not possible for safety reasons.

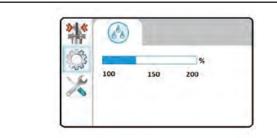


Select the desired value with up \blacktriangle and \blacktriangledown down and confirm with OK.

You can leave the menu without saving the value by pressing ESC.

Configuration of Cooling Time


The cooling function can be configured differently for the "parameter shrinking" and / or "manual shrinking" functions.

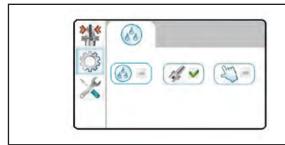

Select the functions with up ▲ and ▼ down and activate with OK. The active function is marked with and confirmed with OK.

The configuration of the cooling time for parameter shrinking or manual shrinking is selected with the corresponding symbol.

Configuration of Cooling Time for "parameter Shrinking"

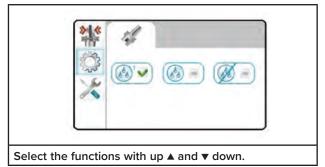

The active function is marked with **W**.

Confirm the function with OK and leave the menu.

You can leave the menu without saving the function by pressing ESC.

The 3 functions possible are as follows:



If the cooling is deselected, cooling is automatically selected again after a shrinking process (default).




The cooling process is always active and can not be deselected by the operator.



The cooling process is always deselected and must be started manually by the operator.

Configuration of Cooling Time for "manual Shrinking"

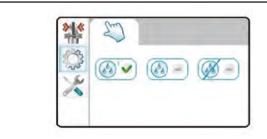


Select the functions with up ▲ and ▼ down. The active function is marked with Confirm the function with OK and leave the menu. You can leave the menu without saving the function by pressing ESC.

All functions of cooling time for "manual shrinking" are similar.

Enter Start Delay

Around 3 seconds will pass before the generator starts. If this waiting time is too short to insert bulky tools, the Start Delay option can be used to set an additional delay of up to 30s.

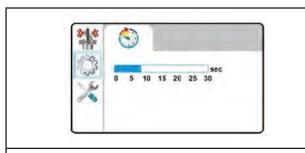


Select the desired value with up \blacktriangle and \blacktriangledown down and confirm with OK.

Enter Stop Delay

After the selected shrinking time has ended, the coil is rapidly driven upwards. If the dwell time of the coils in the lower position is not long enough, a delay time of 30 seconds can be set in the option of the Stop Delay that enables the safe extraction of heavy tools with shrink fitting.

In this case the coil stays in the lower position until the selected time has expired or unless the Stop button is activated.

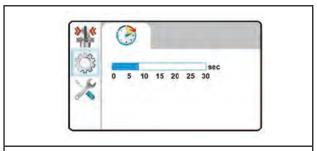


Select the desired value with up \blacktriangle and \blacktriangledown down and confirm with OK.

Password on/ Off or Change

Entering "0000" will switch off the password. This is the factory default.

Whenever you enter a value unequal to "0000" you switch on the password request.

You can enter a password of your choice with up to 4 decimal figures (for e.g.: 3480).

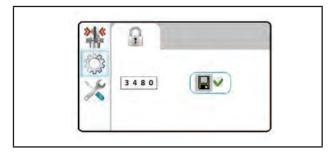

You can increase or decrease the numbers with up \blacktriangle or \blacktriangledown down.

Confirm the value with OK and go to the next decimal figure of the password.


Pressing again OK will save the password. You can leave the menu without saving the password by pressing ESC.

Reset List of Favorites

The list of favorites may be cleared by activating the button with OK.


The new list of tools will be generated automatically according to their occurrence.

See List of most used tools: FAVORITES, page 26.

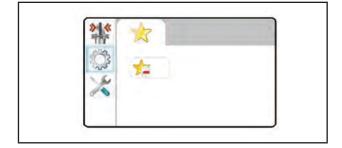

Lock shrinking operations


it is possible to lock the functions "Manual shrinking" and / or "Parameter shrinking" for the operator using a password. The function is only applied when SRKIN / SRK chucks are used and any overheating occurs as a result of an operating error of the operator must be excluded.

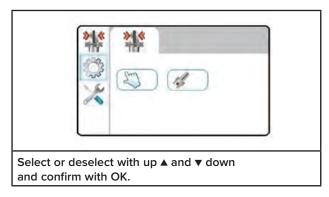

First of all a password must be assigned to be able to lock the functions (see Password on/ off or change, page 30).

Service

With multiple pressings of ESC you come to the main menu.

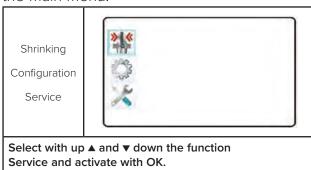

Information about the shrink unit

Type: equipment designation

Generator: number of the generator installed


EEPROM: version of the variable memory

Software: version of the control panel


software


Dist-Board: version of distribution board

Cycle no.: number of all shrinking cycles

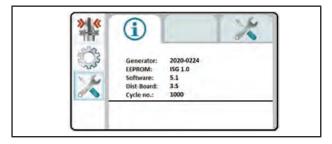

Manual execution of machine functions

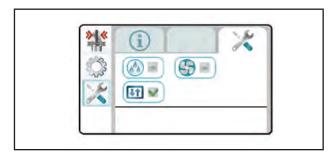

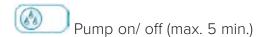





Cleaning and Servicing

Maintenance / Visual Inspection

Every 6 months, check mains cable for damage (visual inspection), the function of protected earth PE and the earth leakage circuit breaker (GFI, GFCI).

To check the GFCI, switch on the pump (see Service, page 41).

Cleaning

The unit must be cleaned regularly. To do this, switch it off at the mains and depressurize (remove the mains plug and also unplug compressed air).

The device can be cleaned on the outside using a moist cloth and standard (solvent-free) cleaning agents.

Checking the Cooling Emulsion

The cooling emulsion (Synergy 905 or own products with similar contents) should be changed regularly, at least every 6 months, depending on the contamination level of tank and cooling emulsion, in order to avoid excessive contamination.

Depending on the contamination level, a system cleaner (Techniclean MTC 43 or own products with similar contents) should be used between cooling emulsion changes.

Mix the system cleaner with coolant and leave it in the tank for one day (approx. concentration of 1%). Shrinking can be carried out for one day with the system cleaner.



The cleaner should not be left in the tank for longer than one day!
The cleaner should not be used as addition to the cooling emulsion!



Keep the unit clean and clean as necessary! Never use compressed air or cleaning agents!



The unit may only be opened or repaired by manufacturer's service personnel!



The manufacturer only recommends the use of Synergy 905 as the emulsion and Techniclean MTC 43 as the cleaner!

If this is not possible, only non-flammable, ester-oil-free emulsions and cleaners may be used, and the technical and chemical properties of these must match Synergy 905 and Techniclean MTC 43.

Manufacturer's details see Safety Data Sheets.

- Synergy 905, page 46
- Techniclean MTC 43, page 50

Filling/ Draining the Cooling Emulsion

1 liter of cooling concentrate (one initial tank filling) is provided with the unit.

In general, your plant cooling emulsion with similar contents can be used.

Only fill in in an empty and clean tank.

- Fill 1 liter of coolant concentrate (approx. concentration of 2-3%)
- Fill water into the coolant tank with a hose up to MIN-MAX range (marked at the tank) (approx. 50 liters)
- After filling the tank, test the cooling cycle several times in order to ensure that the coolant concentrate is 100% mixed with the water

 After this test the shrinking process can begin

Draining the Coolant Tank

To drain the cooling emulsion out of the tank use a sucking device. (see 10.3.4 INDN AP SERVICE PUMP, page 55)

Checking the Float Switch

- Whenever the coolant is changed, the function of the float switch must be checked. The float must move freely and it will sag down by its own weight, when the coolant tank is empty. With full coolant tank, (float under surface level) the float will stay in horizontal position, the switch is closed.
- If the float does not work properly, try to clean it carefully with a damp rag and mild cleaning agents. Do not use cleaning agents containing any solvent.

Do not damage the float.

- If cleaning does not restore function, or if there is any damage to the connector or to the cable, the float switch must be replaced.
- The float switch is a safety device and must not be repaired.

Replacing the Float Switch



Attention: prior to service the machine must be disconnected from its power supply and from the compressed air system (see Safety, page 9)

- To remove the float switch, please disconnect connector from the generator module
- Drain the coolant tank (see 8.3.2
 Draining the coolant tank, page 34)
- Remove plastic hex nut (22mm hex) and pull the wire with the old switch through the hole
- Replace float switch and align properly, so the float hangs down. The float must move freely by its own weight. Tighten plastic hex nut with a torque of 4Nm (2.95 lbf*ft)
- Replace connector to the generator module.
 Do not kink or pinch the cable.
 The cable should not have any tension

Contacting the Manufacturer

These operating instructions can only serve to generally describe the function and operation of the INDN AP UNIT.

To solve special problems and to carry out repairs or to make any changes not described in these operating instructions, please contact your local IMC group supplier who will be pleased to help you.

In case of problems or enquiries, please note the unit serial number and the software status. The serial number is located on the rating disc on the back of the unit and the software status is shown in the Service menu beneath the version numbers.

Appendix

Error Messages and Corrective Measures

Hints are displayed as follows:



Hints serve as information for the operator and can be acknowledged using the Stop button!

Errors are displayed as follows:



After troubleshooting, the displayed error can be acknowledged using the Stop button!

Errors must only be rectified by trained personnel!

Number	Туре	Message	Possible Cause	Corrective Measures
	1	Device cannot be started up and programmed	Lack of compressed air No electric supply Fuses defective	Connect and/ or check the power and compressed air supply Check primary fuses of transformer
1.1	\triangle	No SD card detected in operation panel	SD card faulty or absent	Insert SD card correctly or replace it
1.2	1	Programmed coil and fitted coil are not identical	Coil fit wrong Wrong coil programmed in tool memory	Insert the correct coil Change programmed coil in tool memory
1.3	1	Temperature protection of coil 3 active	Timeout of temperature protection not finished	Wait 5 minutes until end of temperature protection
1.4	\triangle	Telegram error	Connection between operation panel and distribution board faulty	Check the connections in the device
1.6	\triangle	Chuck did not leave start position in time	Position switch misadjusted/ defective Lifting unit not moving freely	Check/ exchange position switch Service/ clean/ lubricate lifting unit
1.7	\triangle	Chuck did not reach end position in time	Position switch misadjusted/ defective Lifting unit not moving freely	Check/ exchange position switch Service/ clean/ lubricate lifting unit
1.8	\triangle	GFCI switch of pump has been released	Pump or GFCI defective	Switch on GFCI Change pump Change GFCI

Number	Туре	Message	Possible Cause	Corrective Measures
1.9	1	Error not acknowledged	Error occurred while shrinking and has not been acknowledged	Solve problem and acknowledge message with Stop button
1.10	1	Wrong type in tool memory	Tool type wrong in set of tool memory	See manual of ToolMemoryEditor
1.11	1	Data carrier not recognized	Invalid set of data on data carrier Data carrier defective	Write valid set of data onto data carrier Change data carrier
1.12	1	Balluff reader not recognized	Balluff reader not connected Cable is defective	Connect Balluff reader to the interface Check the cable
1.13	1	Parity or Stop Bit Error	Balluff reader interface has misconfiguration	Correctly set up the configuration of the reader
1.14	1	Telegram Error	Balluff reader Telegram has invalid carrier	Correctly set up the configuration of the reader
1.15	1	BCC Check Digit Error	Balluff Reader Telegram has incorrect BCC check digit	Correctly set up the configuration of the reader
2.2	1	No USB stick in distribution board detected	USB stick faulty or absent in distribution board	Insert or replace USB stick into distribution board
2.3	1	File not found on USB stick	Missing file on USB stick	Copy missing file on USB stick
2.4	0	Wrong checksum detected in file Tool.bin	Invalid file	Reprogram file with ToolMemoryEditor
1	0	Float switch in coolant tank not engaged	Coolant level in tank too low Float switch fixed or hangs	Refill coolant liquid Check switch/ level
2.6	\triangle	Invalid machine type	Machine type not detectable	Contact your supplier
2.7	\triangle	Telegram error	Connection between distribution board and I/O-extension faulty	Check the connections in the device
2.8	\triangle	Telegram error	Connection between distribution board and generator faulty	Check the connections in the device
2.10	\triangle	Float switch cable not connected	Float switch cable not connected or defective	Check cable and connect to generator box
2.41	\triangle	Fuse has blown	Pump or fuse are defective (Version with Opto-Coupler)	Replace fuse Replace pump
2.42	\triangle	GFCI switch of pump has been released	Pump or line are defective (Version with Opto-Coupler)	Turn on GFCI switch Replace pump
2.44	1	Bilz-Reader not recognized on the USB interface	No reader connected Wrong or defective reader	Connect reader to USB interface or change it

April 2025 37

Number	Туре	Message	Possible Cause	Corrective Measures
2.45	1	Data reader not recognized on the USB interface	No reader connected Wrong or defective reader	Connect reader to USB interface or change it
2.46	1	Connection to database failed	No database connected Connection disturbed Defective Ethernet interface	Connect database Check Connection Change hardware
2.47	1	Data carrier ID not found in the database	Data record from data carrier has not yet been created in the database	Create data record for data carrier ID in the database
2.48	1	BCC error in data record from the database	Transmission error from the database	Check configuration of database
3.1	\triangle	Generator not found at start-up	Generator not connected to distribution board	Check the connections in the device.
3.4	1	Invalid Data	Data in set of parameters corrupted	Insert correct data into tool memory with ToolMemoryEditor
3.6	\triangle	Current defect in IGBT	Missing at least 1 phase Mains supply is too low or is dropping down during shrinking	Check mains supply at mains receptacle in device behind the fuses
3.7	\triangle	Current defect in coil	Current monitoring of the coils diagnoses over/ under current	Check coil contacts Change coil
3.8	1	Safety circuit open Coil temperature	Coil temperature > 60°C	Leave the coil to cool down or change it Try again
3.9	1	No coil detected or coil defective	Coil absent or defective	Fit a coil Replace coil
3.10	1	Safety circuit open Temperature of heat sink too high to start shrinking	Temperature inside of generator is too high	Wait to cool down Try again
3.11	1	Safety circuit open Temperature of heat sink too high	Temperature inside of generator is too high	Wait to cool down Try again
3.12	1	Relay fault	Relay of output stage doesn't close	Try again
3.13	\triangle	Hardware error	Invalid generator hardware detected	Contact your supplier
3.18	0	Generator function stopped incorrect	Error of generator	Acknowledge error message and try again
3.22	\triangle	IGOR hardware error Processor error	Error of generator	Change generator
3.23	\triangle	IGOR communication error between both processors	Error of generator	Change generator
3.24	\triangle	Relay group 1 error	Error of generator	Change generator

Number	Туре	Message	Possible Cause	Corrective Measures
3.25	\triangle	Relay group 2 error	Error of generator	Change generator
3.26	\triangle	Relay/Fuse/Phase Error	Error of generator	Change generator
3.27	\triangle	Relay/Load Resistance Error	Error of generator	Change generator
3.28	\triangle	Relay test currently not working	Error of generator	Change generator
3.29	\triangle	Relay test failed time out	Error of generator	Change generator
3.30	\triangle	Overvoltage	Main voltage is too high	Check power
3.31	\triangle	Under voltage	Main voltage is too low	Check power
3.32	0	Invalid coil resistance	Coil with incorrect ID used	Insert correct coil
3.33	\triangle	Phase missing	Missing phase in power supply	Check power connection

Should these measures fail to start up the unit, please contact your supplier or the manufacturer's customer service.

Technical Data

Designation of Machine Types: Fixed Coil: 400V	INDN AP UNIT	
El. Power Supply:		
400V	3 x 400 V + N / 16 A / 50 Hz	
480V	3 x 480 V / 15 A / 60 Hz	
Generator Power:		
400V	11 kW	
480V	12 kW	
Usable Tool Shanks:	CARBIDE/ HSS	
Maximum of Tool Length:	400 mm (WK1)	
Clamping Range Ø:	3 – 32 mm (CARBIDE), 6 – 32 mm (HSS)	
Air Pressure:	4 bar (60 psi); dried, oil free, filtered (5 μm)	
Weight (without Coolant): 400V 480V	120 kg 125 kg	
Dimensions:		
Depth	560 mm	
Width	800 mm	
Height	1720 mm	
Environmental Conditions:		
Temperature	+5°C +40°C (+40°F +105°F)	
Relative humidity	5% 85%, no condensation, no icing	
Air pressure	86kPa 106kPa	

Scope of Supply

Shrinking Unit INDN AP UNIT incl. coil and 7 ferrite discs, clamping ring, gloves as well as 1 liter coolant concentrate (corresponds to a complete filling of the coolant tank).

Ferrite Discs One-Piece	For an Optimal Shielding of the Magnetic Field Between Coil and Tool Shank			
	Clamping- Ø	Designation	ldent No.	
	3,0-5.0 SRK6	INDN AP DISC 3-5 #0	3446164	
	6,0 – 12,0 mm	INDN AP DISC 6-12 #1	3446167	
	12,1 – 22,0 mm	INDN AP DISC 14-20 #2	3446168	
	22,1 – 32,0 mm	INDN AP DISC 25-32 #3	3446169	
	3.0-5.0 SRK	INDN AP DISC SRK3-5 #5	3430239	
	8.0 SRK	INDN AP DISC SRK8 #8	3430241	
	10.0-12.0 SRK	INDN AP DISC SRK12 #12	3430243	
Clamping Ring	For a S	ecure Support of the Ferrite Disc in t	the Coil	
		Designation	Ident No.	
		INDN AP CLAMP RING	3446175	
Gloves	For the protection from possible burns and cuts			
22. 1/6		Designation	Ident No.	
		IND THERMIC GLOVES	4592880	
Cooling Emulsion	Cooling Emulsion to Protect the Chuck Against Corrosion			
,m		Designation	Ident No.	
	1 liter (supplied)	COOLANT SYNERGY 905	3447823	
	System cleaner	Techniclean MTC 43		

April 2025 41

Available Additions and Optional Accessories

Multi Adapters	For the Reception and Correct Positioning of the Chuck		
men.	Chuck-Type	Designation	Ident No.
	HSK32 / C3	INDN AP AD 32	3446176
	HSK40 / C4	INDN AP AD 40	3446177
	HSK50 / C5 / #30	INDN AP AD 50	3446178
	HSK63 / C6 / #40	INDN AP AD 63	3446179
	HSK80 / C8 / #45	INDN AP AD 80	3446180
	HSK100 / C10 / #50	INDN AP AD 100	3446181
Ferrite Disc Two-Parts	For Application with Larger Cutting Diameters as with the Shrinking Shaft Diam		
	Clamping-Ø	Designation	Ident No.
	Ø3-5	INDN AP SPLIT #0	3446171
	6,0 – 12,0 mm	INDN AP SPLIT #1	3446172
	12,1 – 22,0 mm	INDN AP SPLIT #2	3446173
	22,1 – 32,0 mm	INDN AP SPLIT #3	3446174
Coil Limit Stop	Fixture Used for Special Applications Like Ferrite Discs Two-Pieces. Used as a Stopper for Positioning the Coil When no Correct Positioning Between Ferrite Disc and Chuck Front end Will Be Possible.		
A III		Designation	Ident No.
		INDN AP COIL LIMIT STOP	3446391

Service Pump

The service pump can be used to drain the cooling tank of shrink machines with water cooling. Power via 2 batteries Mono Type D 1,5 V (included).

	Designation	ldent No.
Service Pump	INDN AP SERVICE PUMP	3446392

Instructions Safety Glove

Description:	Heat protection glove, outer layer consisting of para aramide yarn (KEVLAR) Fine knitted fabric lined with aramide felt and 100% Nornex knitted fabric
Availability:	Size 10
Color:	yellow
Manufacturer:	JUTEC GmbH, Mellumstr. 23-25, D-26125 Oldenburg
Description:	These gloves have been designed to protect your hands. They are made of the materials named above. The characteristic features of these gloves are their long service life and outstanding comfort.
Category	(€ ⁹⁵
Instructions:	Check that the gloves offer suitable protection for the activity you are currently performing. Select the gloves to fit the size of your hands. Remove the gloves from the wrapping. When using the gloves, pay attention to the following points: The maximum touching time depends on the area touched. For safety reasons this time should never exceed 5 sec. The open structure of these gloves means that they cannot protect your hands from punctures and impacts from pointed objects. Penetration by liquids is also possible. For protection from chemicals, gloves resistant to such substances should be worn over these gloves. Oil, grease and moisture reduce the resistance of all gloves to cutting damage and should be avoided. KEVLAR gloves are resistant to the machine.
Care and Repairs:	KEVLAR gloves can be dry-cleaned or washed according to the instructions on the label. Wash in water and mild detergent at maximum 40°C. DO NOT USE softening agents, bleach or oxidizing agents, as these weaken the aramide fibers and reduce the cut-resistance of the gloves. After washing the gloves, check them carefully for any cuts and worn places. Do not use gloves which are damaged too much and can no longer be repaired, as these no longer offer adequate protection.
Storage:	The gloves should be kept in their original wrapping in a dry, clean place. Avoid exposing the gloves to moisture or high temperatures.
Warning:	The degree of protection required by a special task depends on the risks involved. You yourself bear final responsibility for selection of the best safety equipment for the risks involved in your workplace. Please check whether this article offers adequate protection for the jobs of work you have to perform. We offer a whole range of cut- and heat-proof KEVLAR gloves for high-risk jobs of work

April 2025

Mains Connections

Allocation of the CEE socket



Pin Name	Pin Designation	Wire Color
L1	Phase L1	Brown
L2	Phase L2	Black/ grey
L3	Phase L3	Black
N	Neutral	Blue
PE	Ground	Green-yellow

The nominal voltages between the phases are $3 \times 400 \text{ V}$ (-10/ +10%) The nominal voltage between a phase L1, L2 or L3 and neutral is 230V (-10/ +10%)

Further hints:

- Connecting the protected earth PE and connecting the neutral N is essential!
- If an earth-leakage circuit breaker (GFI, GFCI) is used for the protection of the CEE-socket, it must be 4-polar.

Allocation of the power cord (480V)

Pin Name	Pin Designation	Wire Color
L1	Phase L1	black
L2	Phase L2	orange
L3	Phase L3	red
PE	Ground wire	green

The nominal voltages between the phases are $3 \times 480 \text{V}$ (-10/ +10%)

Further hints:

- Connecting the protected earth PE is essential!
- This device must be connected to a circuit of 20A max. with class J fuses.
 It is recommended to place a fused disconnect in close proximity of the machine with lock out provision provided. We recommend placing an insulation transformer ahead of this.

EC Declaration of Conformity

In accordance with the EC Machinery Directive 2006/42/EC

IMC BV

declares, that the machine designated below corresponds to the following relevant directives with regard to its design and construction in the version brought into circulation.



Designation of the Machine:	Induction unit
Designation of the Machine.	
Machine Type:	INDN AP UNIT
	EC Machinery Directive
Relevant EC Directives:	2006/42/EC
	EC EMC Directive 2014/30/EC
	EN ISO 12100:2010
	EN 60204-1:2006+A1:2009
	EN 61000-6-2:2005
Applied Harmonized Standards, in Particular:	EN 61000-6-4:2007 + A1:2011
Standards, in Particular.	EN 55011:2009 + A1:2010
	EN 60519-1:2011
	EN 60519-3:2005
Applied National	FCC 47 CFR Ch. I (Edition
Standards (USA):	10-1-01), Part 18 C


In the event of any changes to the machine for which we have not been consulted, this statement becomes null and void.

THECOMPANY:


Company Name:	IMC BV	
Hoodewartore	Zwolleweg 6, 2803 PS	
Headquarters:	Gouda, Netherlands	

April 2025


Safety Data Sheets Synergy 905

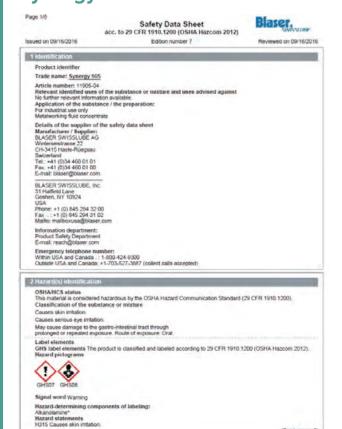


(Corrd. on page 2)

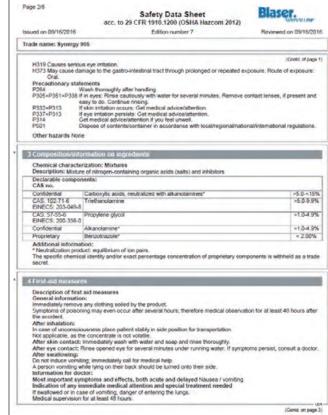

(Contd. on page 5)

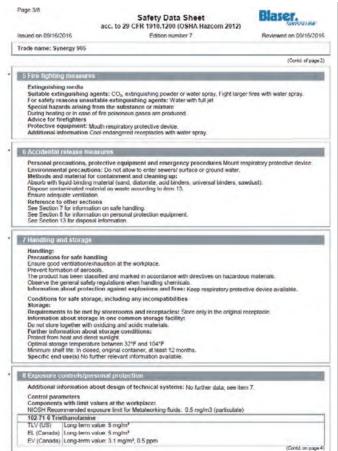

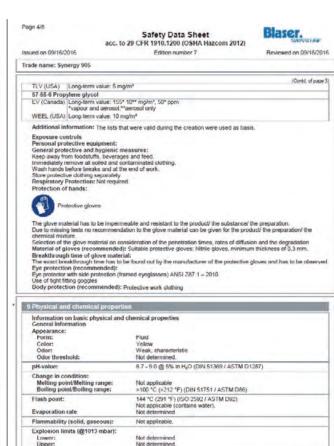

April 2025 47

Page 5/8	acc. t	Safety Data Sheet o 29 CFR 1910.1200 (OSHA Hazcom 2012)	Blaser.
ssued on 09r		Edition number 7	Reviewed on 09/16/2016
rade name:	Synergy 905		
			(Contd. of page 4
Oxidizing	properties	Not applicable.	
Vapor pre Refractive Relative of	e index: density	Not determined. 1.404 1.06 @ 60°F (20 °C) (DIN 51757 / ASYM D121	n
Vapor de Evaporat		Not applicable. Not determined.	
Solubility Water:	in / Miscibility with	Emulsifiable.	
Auto-igni	coefficient (n-octanol/wi ition temperature: osition temperature:	ater): Not determined. Product is not selfigniting. Not determined.	
Viscosity Kinema	r stic at 40 °C (104 °F):	5.8 mm*/s (ISO 3104 / ASTM D445)	
VOC con	tent:	164 gl (ASTM E1868-10); Concentrate in the p 24.6 gl (ASTM E1868-10) @ Maximum concer	
Solvent c	content:	13.8 %	TRAILER T
Other infe	ormation:	none	
Reactivity Chemical Thermal	decomposition / condition	commended storage conditions. ons to be avoided: No decomposition if used accord	ing to specifications.
Reactivity Chemical Thermal - Possibility Condition Incompat Hazardou (in case of Carbon m	y None known if used as o I stability Stable under re- decomposition / condition by of hazardous reactions as to avoid No further rele	commended storage conditions, note to be avoided: No decomposition if used accord is Reacts with strong acids and oxidizing agents, valid information available, referant information available, cts	ing to specifications.
Reactivity Chemical Thermal Possibilit Condition Incompat Hazardou (in case of Carbon m Nitrogen of	y None known if used as a l stability Stable under re- decomposition / condition by of hazardous reactions as to avoid No further reli- tible materials: No further as decomposition produs of the condition; onoxide and carbon dioxid	commended storage conditions, note to be avoided: No decomposition if used accord is Reacts with strong acids and oxidizing agents, valid information available, referant information available, cts	ing to specifications.
Reactivity Chemical Thermal Possibility Condition Incompat Hazardou (in case of Carbon m Nitrogen of Informati Acute tox	y blone known if used as a latability Stable under re decomposition / condition ty of hazardous reaction so to avoid hot further reliable materials: No further sit decomposition product of fire or exidation; consolid and carbon disak incides (NCIX) grical information on on toxicological effecticity; values that are relevant.	commended storage conditions. In the beautiful to decomposition if used accord is Reactis with strong acids and oxidizing agents. The strong acids and oxidizing agents. The strong acids are strong acids and oxidizing agents. The strong acids are strong acids and acids	ing to specifications.
Reactivity Chemical Thermal Possibility Condition Incompat Hazardou (in case of Carbon m Nitrogen of Informatis Acute tox LD/LC50	y blone known if used as a labality Stable under re- decomposition / condition of condition product of fine or exidation product of fine or exidation product of fine or exidation production of condition (NOX) or exident (NOX) or exiden	commended storage conditions. In the beautiful to decomposition if used accord is Reactis with strong acids and oxidizing agents. The strong acids and oxidizing agents. The strong acids are strong acids and oxidizing agents. The strong acids are strong acids and acids	ing to specifications,
Reactivity Chemical Thermal Possibilit Condition Incompat Hazardou (in case o Carbon m Nitrogen o Informati Acute too LD/LC50 *pure sub	y blone known if used as a latability Stable under re- decomposition / condition by of hazardous reaction is to avoid to further rei- table materials: No further soften or policion production of fire or policion produc- production and carbon down modes (NOX): "grical information on on toxicological effection to the production of values that are relevant betance maner."	commended storage conditions, make to be avoided: No decomposition if used accord is Reacts with strong acids and avidizing agents, variet information available, referent information available, the for classification: > 2000 mg/kg (rat)	ing to specifications.
Reactivity Chemical Possibilit Condition Incompat Hazardou (in case o Carbon in Nitrogen o Informati Acute tox LDILC50 * pure sub Alkanolae Oral	y blone known if used as a latability Stable under re- decomposition / condition by of hazardous reaction is to avoid to further rei- table materials: No further soften or policion production of fire or policion produc- production and carbon down modes (NOX): "grical information on on toxicological effection to the production of values that are relevant betance maner."	commended storage conditions. In the top and the third composition of used accord is Reactive with strong acids and oxidizing agents. In the third composition available cities and available cities are available cities. In the third composition available cities are available citi	ing to specifications.
Reactivity Chemical Possibilit Condition Incompat Hazardou (in case o Carbon in Nitrogen o Informati Acute tox LDILC50 * pure sub Alkanolae Oral	y blone known if used as a latability Stable under re- decomposition / conditive ty of hazardous reaction is to avoid to further rel- tible materials: No further so decomposition produce of fire or oxidation; consuite and carbon desir insides (NOx) segical information on on toxicological effection; values that are relevant settings.	commended storage conditions, make to be avoided: No decomposition if used accord is Reacts with strong acids and avidizing agents, variet information available, referent information available, the for classification: > 2000 mg/kg (rat)	ing to specifications.
Reactivity Chemical Thermal - Pussibilit Condition Incompat Hazardou (In case c Carten m Nitrogen e Informati Acute tos LD/LC50 *pure sub Alkanola Oral	y blone known if used as a latability Stable under re- decomposition / condition by of hazardous reaction is so to avoid to further rei- table materials: No further sold ematerials: No further sold ematerials: No further sold ematerials: No further of fire or exidation; nonaxies and carbon dossin notices (NOX) ggical information on on toxicological effection of the condition of sold or sold	commended storage conditions, make to be avoided: No decomposition if used accord is Reacts with strong acids and avidizing agents, value from a validable, case a condition of the strong acids and avidizing agents, referent information available, case for classification: **Total Condition** **Total Con	ing to specifications.
Reactivity Chemical Thermal - Pussibilit Condition Incompat Hazardois (In case o Carben in Nitrogen o Nitrogen o Libroxicolo Informati Acute tos LDILCS0 - Pure sub Alkanola Oral Decycloho Oral Dermal	y blone known if used as a latability Stable under re- decomposition / conditive yof hazardous reaction is to avoid to further rel- table materials: No further so decomposition product of fire or oxidation; comoside and carbon dioxis monoside and carbon dioxis indicas (NOx) popular information on on toxicological effection; values that are relevant statuce mene* [LDS9] No Observed Adverse El exylamine* [LDS9]	commended storage conditions, may be a vised accord is flancials with strong acids and oxidizing agents. Televant information available, referent information available, the strong acids and oxidizing agents. Televant information available, the strong acids of the st	ing to specifications.
Reactivity Chemical Thermal - Pussibilit Condition Condition Incompat Hazardot (In case c Carters m Nitrogen c Informati Acute tos LD/LC50 - Pure sub Alkanolae Oral Decyclohe Oral Demnal	y blone known if used as a lability Stable under re- al stability Stable under re- decomposition / conditity y of hazardous reaction y y of hazardous reaction of the stable of the stab	commended storage conditions, may be a vised accord is flancials with strong acids and oxidizing agents. Televant information available, referent information available, the strong acids and oxidizing agents. Televant information available, the strong acids of the st	ing to specifications.
Reactivity Chemical Thermal - Possibilit Condition Condition Incompat Hazardou (In case o Carbon m Nitrogen o Informats Acute tox LD/LC50 * pure sub LD/LC50 * pure sub Discyclohe Decyclohe Oral Demnal 31075-244	y blone known if used as a lability Stable under re- lability Stable under re- decomposition / conditive y of hazardous reaction is to avoid to further rei- toble materials: No further rei- to	commended storage conditions, make to be avoided: No decomposition if used accord is flandatis with strong acids and oxidizing agents. referent information available, referent information available, see the second oxidization of the second oxidization oxidi	ing to specifications.

(Contd. on page 6)


Page 6/8 Blaser. Safety Data Sheet acc. to 29 CFR 1910,1200 (OSHA Hazcom 2012) Issued on 09/16/2016 Edition number 7 Reviewed on 09/16/2016 Trade name: Synergy 905 (Contd. of page 5) Sensitization: No sensitizing effects known.
Additional toxicological information:
Translate shows the following dangers according to internally approved calculation methods for preparations:
Inflant Initiant
IARC (International Agency for Research on Cancer)
102-71-6 | Triethanolamine
NTP (National Toxicology Program)
None of the ingredients are listed. 12 Ecological information Toxicity
Aquatic toxicity:
*pure substance
Denzionazou of (Brachydanic reno)
NOEC/21d | 0,97 mg/l (Daphnia galeata)
NOEC/21d | 3,94 mg/l (Daphnia galeata)
NOEC/21d | 3,94 mg/l (Daphnia magna)
Filorefolavardamine* Dicyclohexylamine*


LCSONRh 62 mgl (Danio reno)
12 mgl (Oryzias latipes)

EC50/48h 8 mgl (Daphnia magna) BCSUHER (201 mg)L (Dahnia magna)
31015-24-8 Poly quaternary ammonium chloride
LCSO9891 (3047 mg)l (Conordinative mykiss) (OECD 203)
LCS04401 (3.37 mg)L (Dahnia magna) (OECD 202)
LCS0472h (3.0019 mg)L (Aligae) (OECD 201)
Persistence and degradability No further relevant information available.
Behavior in environmental systems:
Bioaccumulative potential No further relevant information available.
Mobility in soil No further relevant information available.
Additional ecological information:
General notes:
De not allow product to reach ground water, water course or sewage system.
Danger to drinking water if even email quantities leak into the ground.
Results of PST and VPVB assessment
PST: Not applicable.

Other adverse effects No further relevant information available. 13 Disposal considerations Waste treatment methods
Recommendation:
Must not be disposed of together with household garbage. Do not allow product to reach sewage system. Used containers
Recommendation: Disposal must be made according to official regulations.

(Contd. on page 7)

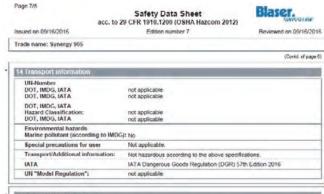

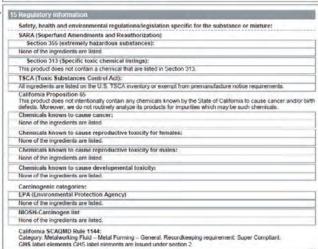



April 2025

Techniclean MTC 43

Conforms to Regulation (CC) No. 1907/2008 (REACH), Annex II, as ame

SAFETY DATA SHEET



SECTION 1: Identification of the substance/mixture and of the company/undertaking

1.1 Product Identine

Product name Product code 3D3 no. Product type Techniclean MTC 43 462650-DE02 462650 Uquid.

Use of lubricants and greaces in open systems industrial Use or lubricants and greaces in open systems-Professional

Cleaner
For specific application advice see appropriate Technical Data Sneet or consult our company representative.

1.3 Details of the supplier of the safety data sheet

Castrol (UK) Limited PO Box 352

NO retur solt.

Cherthey float
Cherthey
Ch

1 A Principancy talaphone murth EMERGENCY TELEPHONE NUMBER Carecherr: +44 (0) 1235 239 670 (24/7)

SECTION 2: Hazards identification

2.1 Classification of the autostamos or mixture
Product definition: Mixture
Classification according to Regulation (EC) No. 1272/2004 [CLP/0110]
Skin ner 2. H415.
Eye Dam. 1, 1016
Aguatic Chronic 2. H412

Aquatio Critorio 3, 1412
Additional lithig malition CLP. Not classified as hazardous after disided below 5%
See Declini 16 for the full lexi of the rit statements declared above.
Dee sections 11 and 12 for more detailed information on health effects and symptoms and environmental hazards.

Hazard pictograms



uligi de Causes serious eye damage. H315 - Causes skin intation. H412 - Hamiful to aqueto life with long lasting effects.

on (EC) No. 1907/2006 (REACH). Annex II. as amended by Commission Regulation (EU) 2015/830

SECTION 2: Hazards identification

P392 + P315 - If skin imitation occurs. Get medical attention.
P302 + P315 - P316 - If IN EVTE: Rinse cautiously with water for several minutes. Immediately call a P01500 (CRNTER or physician.

Not applicable. P801 - Dispose of contents and container in accordance with all local, regional, national and international regulations. Storage Disposal

(ethylenedicxy/dimethanol alcohols, C8-10, ethers with polyethylene-polypropylene glycol monobencyl ether Supplemental label elements

elements

EU Renutation (EC) No. 1507/2006 (REACH)
Annex XVII - Restrictions on the manufacture, placing on the market and use of certain dangerous substances, mixtures and articles psocial packaging requirements.

Containers to be fitted with childrenistant fastenings.

Tactile warning of danger Not applicable

2.3 Other hazards

Other hazards which do not result in classification Detating to the skin.

SECTION 3:	Composition/information o	n ingredient:

Substance/mixture Mix	ture			
Alkalis and additives in aqueous soluti	on.			
Productingredient name	Identifiers	4	Regulation (EC) No. 1272/2008 [CLP]	Турч
(ethylenedioxy)dimethanol	EC: 222-729-6 CAS: 3596-55-8	£10	Acuse Tox. 4, H302 Skin Imt. 2, H315 Eye Dam. 1, H318	tst
dipropylene glycol methyl ether	REACH #: 01-2119450011-60 EC: 252-104-2 CA3: 34590-94-8	£10	Not classified.	02
alcohols, C8-10, ethers with polyethylene-polypropylene glycol monobenzyl ether	CAS: 88154-99-4	£10	Acute Yox. 4, H312 Skin Int. 2, H315 Eye Dam. 1, H318	int
Alcohols, C9-11, ethoxylated	CAS 68439-46-3	53	Eye Dam 1, H318	(10
Alcohols, C12-15, ethorylated propoxylated	CAS 68551-13-3	122	Aquatic Acute 1, H400 (M=1)	tri
pyridine-24tiol f-oxide, sodium salt	EO: 223-298-5 CAS: 3811-73-2	s0.22	Acute Tox. 4, H302 Acute Tox. 4, H312 Acute Tox. 4, H332 Skin Imt. 2, H313 Skin Imt. 2, H315 Aquatic Acute 1, H400 (M=100) Aquatic Chronic 1, H410 (M=100)	m

See Section 16 for the full text of the H statements declared above. Type

Product name	Technidean MTC 43	Product code 4	02050-DE02	Page: 2/17
Version 202	Date of issue 3 January 2017	United Kingdom (UK) (United Kingdom	Language	ENGLISH

Conforms to Regulation (EC) No. 1907/2006 (REACH). Annex II. as amended by Commission Regulation (EU) 2015/1530 SECTION 3: Composition/information on ingredients [1] Substance classified with a health or environmental hazard

Substance classified with a health or environmental hazard Substance with a mortiplane exposure limit Substance meets the cream for PITI according to Regulation (EC) No. 1997/2005, Annex XVII Substance meets the cream for PITI according to Regulation (EC) No. 1997/2006, Annex XVII Substance of equivalent concern.

re limits, if available, are listed in Section 8. SECTION 4: First aid measures

Inhalation

In case of confact, immediately flush eyes with plenty of mater for at least 15 minutes. Eyelds should be held assy from the eyesta to ensure thorough manay. Check for and remove any contact limites. Chemical burs must be realist promptly by a physician. Get medical adelerion immediate.

Skin contact

Protection of first-aiders

advention immediately. Wash six horse to trace prempty by a physician. Get medical appropriate in the continuate of colors and a six his thoroughly with soop and water or use recognized skin cleanases. Remove contaminated clinking and shoes. Wash clothing before revise. Clies index shorts thoroughly before revise. Clies index in the six of the shorts thoroughly before revise. Clies index in the shorts thoroughly before revise. Clies index in the shorts are short in the shorts of the shorts. The supposed person may need to be kept under medical surveillance for 4th hours.

Do not induce vernifing unless directed to dis so by medical personnel. Never give anything by mouth to an unconscious person. If unconscious, place in recovery position and get medical advention in symptoms account of the short of symptoms account of the short of symptoms account or symptoms account of symptoms account of symptoms account or symptoms account of symptoms account or symptoms account of symptoms account or sy

4.2 Most important symptoms and effects, both acute and delayed. See Section 11 for more detailed information on health effects and symptoms.

Notes to physician

Treatment should in general be symptomic and directed to relieving any effects in case of inhalation of decomposition products in a fire, symptoms may be elitary. The exposed person may need to be kept under medical surveillance for 40 hours.

SECTION 5: Fireflighting measures
3.1 Extinguishing weeds.

5.1 Extinguishing media Suitable extinguishing media

Use foam or all-purpose dry chemical to eutinguish.

Unsuitable extinguishing Do not use water jet media

5.2 Special hazards arising from the substance or minture.
Hazards from the substance or nitrure.
In a fire or if heated, a pressure increase will occur and the container may burst substance or instrure.

Combustion products may include the following: carbon caldes (CO, CO₂) (carbon monoxide, carbon dioxide) nitrogen oxides (NO, NO₃ etc.)

5.3 Advice for firefighters Special precautions for fire-fighters

Special protective equipment for fire-fighters

Promptly solble the scene by removing all persons from the vicinity of the modent if there is a fee. No action shall be taken involving any personal risk or eithous suitable training. This makestal is harmful to aquatio organism. Five mater containable with this makestal in such is makestal in such in makestal in such contained and prevented from being discharged to any materials, seems or drain. Five-depters, solving like seems or drain. Five-depters is volunted by the seems of drain. Five-depters is volunted by the seems of drain five-depters in the seems of the seems of draining the seems of t

Product name Technidean MTC 43 Product code 482050-DE02 Page: 3/17 Format United Kingdom (UK) (United King Version 2.02 Date of Issue 3 January 2017 Language ENGLISH

Conforms to Regulation (EC) No. 1907/2006 (REACH). Annex II. as amended by Commission Regulation (EU) 2015/830

SECTION 6: Accidental release measures

For non-emergency personnel

I release measures

dive equipment and emergency procedures

To action shall be taken involving any personal risk or without suitable training. Evacuate
somburiding areas. Yespo unnecessary and upsofected personnel from entering. Do not bouch
or with through soft materiar. However, we can't be averaged failing. Do not breather
equipment. Contact emergency pressures.

Employ that a confidence space or poolity vertilised areas contaminated with vaporal, mist or furne is
extremely hazardous without the corner respiratory protective exportant and a safe system of
work. Was a relationational breathing apparation. War a suitable command protective suit.

Chemical resistant boots. See also the information in "For non-emergency personnel".

For emergency responders

6.2 Environmental

Avoid dispersal of spit material and runoff and contact with soil, waterways, drains and sewers leftorm the relevant authorities if the product has caused anxinomental pollution (sewers, waterways, soil or air). Water polluting material. May be harmful to the environment if released in large quantities.

6.3 Methods and material fo Small spill

ntainment and cleaning up Stop leak if without risk. Move containers from spill area. Absorb with an inest material and place in an appropriate waste disposal container. Dispose of via a licensed waste disposal contraster

constants.

Stop lead if etitlout risk. Move containers from spill area. Approach the release from spivred.
Prevent entry also searer, water courses, basements or confined areas. Contain and collect
search and place in container for significant and search and place in container for significant
and place in container for significant
and place in container for significant according to ladd regulations. Contaminated
absorbert material may pose the same hazard as the spill product. Dispose of via a forersed
waster disposal contrainer.

6.4 Reference to other

See Section 1 for enterigency contact information. See Section 5 for freelighting measures. See Section 12 for environment on appropriate personal protective equipment. See Section 12 for environmental precautions. See Section 12 for environmental precautions.

SECTION 7: Handling and storage

The information in this section contains generic abrove and guidance. The list of Identified Uses in Section 1 should be consulted for any available use-appendin information provided in the Exposure Diseason(s).

7. Precautions for safe handling.

Protective measures. Put on appropriate personal projective equipment. Do not breathe vacour or mat. Do not

Large spill

Put on appropriate personal protective equipment. Do not treathe vapour or mist. Do not ingrest. Ancoid contact of spit material and runoff with soil and surface waterways. If during normal use the material presents are spinately hazard, use only with adequate ventilation or near appropriate respirator. Need in the original container or an approving medical resolution or most appropriate respirator. Need in the container or an approving adequate made from a compatible material, kept tapity closed when not in use. Do not reuse container. Empty containers read protect in solution and containing the protection of the additional information on hydronic measures.

Advice on general corupational hygiene

Store between the following temperatures: 5 to 40°C (41 to 104°F). Store in accordance with local registrations. Store in a dry, cool and well-westilated area, away from incompatible materiatis (see Section 10). Stere localed up. Keep away from hera and direct samight. Keep container tightly closed and sealed until ready for use. Containers that have been opened mix he carefully re-leader and keep tropits for prevent leasange. Ectore and use only in exponent containers designed for use with this product. Do not store in unbability optimizes, supports a containment to avoid enrecemental containmantance.

See section 1.2 and Exposure scenarios in annex, if applic

Product name	Technidean MTC 43		Product code 46265	0-DE02	Page: 4/17
Version 2.02	Date of Issue 3 January 2017	Format	United Kingdom (UK) (United Kingdom)	Language	ENGLISH

ms to Regulation (EC) No. 1907/2006 (REACH). Annex II. as amended by Commission Regulation (EU) 2015/830

SECTION 8: Exposure controls/personal protection

The information in this section contains generic advice and guidante. The list of identified Uses in Section 1 sho consulted for any available use-specific information provided in the Exposure Scenario(s).

8.5 Control parameters Occupational exposure limits

Product/ingredient name

Producting redient name

Gissionisc WELs (Unided Kingdom (UKI)). Absorbed through skin.

TWA: 30 mg/m² (UKI). Absorbed through skin.

TWA: 30 mg/m² (UKI). Absorbed through skin.

TWA: 40 mg/m² (UKI). Absorbed through skin.

TWA: 50 mg/m² (UKI).

Twa: 50 mg/m² (UKI). Absorbed through skin.

No DNE LADNE La available

Predicted No Effect Concentrate No PNECs available

Provide exhaust verifiation or other engineering controls to keep the relevant airborne concentrations before their respective occupational exposure intes. All activities revolving otherwises issuable to assessed for their risks to bealth, to ensure exposures are adequately controlled. Personal presentive equipment should only be considered exposures are adequately controlled. Personal presentive equipment should only exposure (e.g. engineering controls) have been suitably evaluated. Personal protective equipment should conform to appropriate standards, be suitable for use, be expir in good condision and properly maintained. Your supplier of personal protective equipment should be consulted for advice on selection and opportunity administer. For further elimination control your national organization for splandards, and sufficient elimination controlled your national organization for splandards, enter their elimination controlled your national organization for splandards, entered their elimination controlled your national organization for splandards, entered their elimination controlled your national organization for splandards.

ndividual protection measu Hygiene measures

Wash hands, forearms and face thoroughly after handling chemical products, before eating, smoking and using the levisitory and at the end of the working period. (Insure that eyewash stations and safety showers are close to the workstation location.)

James area avertly strowers are alread to the workstation location.

Use with adequate vertitation, invest pulsable respiratory equipment, in case of inauthicient vertitation, wear pulsable respiratory equipment.

Recommender, and its mask, investment passes vapor filter if type (i) particulate filter.

The context choice of respiratory provident depends point the chemicals being handled, the filter context of the properties of the properties. The providence is about the developed for sain traded application the perpending providence approved in the providence in accordance in accordance with the suppliestment personal context and with a full assessment of the working conditions.

Eyerface protection Skin protection Hand protection

Chemical splash goggles.

Because specific work environments and material handling practices vary, safety procedures should be developed for each interrold application. The current choice of protection gloves cooperating from technicals level princinde, and the condition of works had use Most gloves cooperating for the chamicals level principle. The process of the condition of works and use Most gloves provide processing from any it into a time before they must be discarded and registered sets of the most process and these beam process and these beam state repeated of themselved apposituation.

Product name Techniclean MTC 43 Product code 402050-CE02 Page: 5/17 Format United Kingdom (UK) (United Kingd Date of issue 3 January 2017 Language (NGLISH

lation (EC) No. 1907/2006 (REACH). Annex II, as amended by Commission Regulation (EU) 2015/830

SECTION 8: Exposure controls/personal protection
Gloves should be chosen in consultation with the supplier / manufacturer and taking acc
a full assessment of the working conditions.

Wear suitable gloves. Recommended: Butyl gloves. Breakthrough time:

Breakforught time data are penerated by gieve manufasturers under laboratory test con-and represent hore long a glove can be expected to provide effective permeation resistant and represent hore long the feath rought have recommendations that actual resistant conditions will be about the recommendation of the study of contact many graphs to gight for up-to-date sold without on the selection of the selection of given as a follower.

Sloves with a minimum breakthrough time of 240 minutes, or 1460 minutes if suitable gloves can be obtained. If suitable gloves are not available to other that level of protection, gloves with shorter treakthrough times may be acceptable as long as appropriate glove maintenance and replacement regions are determined and achieved to.

Short term / splash protection:

Recommended breakthrough times as above. It is recognised that for short-term, transient exposures, gloves with shorter breakthrough times may commonly be used. Therefore, appropriate maintenance and replacement regimes must be determined and reprovely followers.

Glove Thickness:

For general applications, we recommend gloves with a thickness typically greater than 0.35 mm.

It should be emphasised that glove thickness is not necessarily a good predictor of glove resistance to a specific chemical, as the permastion efficiency of the glove will be dependent on the exact composition of the glove material. Threston, glove selection should also be based on consideration of the task requirements and knowledge of breakthrough times. Glove thickness may also vary depending on the glove maturialization the glove the glove and the glove model. Therefore, the manufacturer's inchmical data should always be taken into account to ensure selection of the most appropriate glove or the task.

Note: Depending on the activity being conducted, gloves of varying thickness may be required for specific tasks. For example:

Thinner gloves (down to 0.1 mm or less) may be required where a high degree of manual destenty is needed. However, these gloves are only likely to give short duration protection and would normally be just for single use applications, then disposed of.

Thicker gloves (up to 3 mm or more) may be required where there is a mechanical (as well as a chemical) risk i.e. where there is abrasion or puncture potential.


Skin and body

Use of protective clothing is good industrial practice. Personal protective egaprenet for the body should be selected based on the Lask being performed and the rasks involved and should be approved by a specialist before handling this product. Cotton or polyesperiodition over alls will only provide protection against light superficial contamination that will not loak through to the site. Overalls should be launched on a regular contamination that will not loak through to the site. Overalls should be launched on a regular can be supported by the contamination of the state of the state of the state of spatiality of the other law is table to give the changing a plantage or to their bis or will be required.

Refer to standards:

will be required.
Respiratory protection: UN 529
Gliowes: EN 420, EN 374
Eye protection: EN 160
Filtering half-mask: EN 149
Filtering half-mask: EN 149
Filtering half-mask: EN 150 plus filter
Full-face mask: EN 150 plus filter

Product name	Technidean MTC 43	Product code 4	62650-DE02	Page: 6/17	ī
Version 2.02	Date of Issue 3 January 2017	United Kingdom (UK) (United Kingdom	Language	ENGLISH	

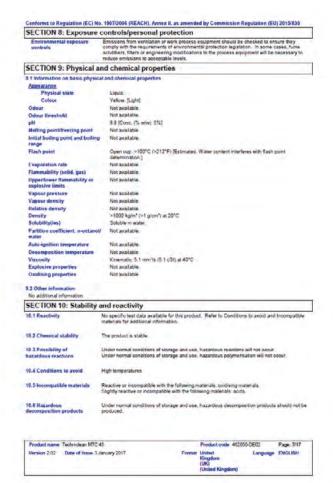

SECTION 11: Toxico	logical information		
1.1 Information on toxicolo	gioal effects		
Acute toxicity estimates			
	Route		ATE value
Oral			5854 3 mg/kg
Dermai			22000 ing/kg
Information on likely routes of exposure	Routes of entry anticipated: De	rmal, Inhulati	20.
Potential acute health effect Inhalation	May give off gas, vapour or dus Exposure to decomposition pro delayed following exposure. M	ducts may ca	initating or corrosive to the respiratory system, use a health hazard. Serious effects may be ition to eyes, nose and throat due to exposure
Ingestion	vapour, mists or fumes. Imitating to mouth, throat and st	in the	
Skin contact	Causes skin milation. Defading		
Eye-contact	Causes senous eye damage	S. St. A. S. Sect.	
and the second s	orsical, chemical and toxicological	d characteris	dies.
Inhalation	No specific data.		Man.
Ingestion	Aguerse symptoms may include stomach pains	the following	1
Skin contact	Adverse symptoms may include pain or intration redness dryness cracking billstering may annur	e the following	•
Eye contact	Adverse symptoms may include pain watering redness	the following	
Delayed and immediate effe	ets as well as chronic effects fro	m short and	long term exposure.
Inhalation	Overexposure to the inhalation respiratory tract	of airbome d	roplets or serosols may cause imitation of the
Ingestion	Ingestion of large quantities ma	y cause naus	ea and darmoea.
Skin contact	Prolonged or repeated contact	can defat the	skin and lead to imitation and/or dermatitis.
Eye contact	Potential risk of transient stinging	ng or redness	if accidental eye contact occurs.
Potential chronic health eff	ects		
General	No known significant effects or	ortical hazar	59.
Carcinogenicity	No known significant effects or	critical hactar	dy .
Mutageniolty	No known significant effects or		
Developmental effects	No known significant effects or	critical hazar	ds.
Fertifity effects	No known significant effects or	critical hazar	ds.
ECTION 12: Ecolog	ical information		
2.1 Toxicity			
Environmental hazards	Harmful to aquatic life with long	risting effect	s
2 Persistence and degrad specied to be biodegradable			
2.3 Bioaccumulative potent	ant.		
of available			
2.4 Mobility in soil			
Solifwater partition coefficient (%»)	Not invallable.		
Mobility	Liquid. Soluble in water.		
Product name Techniclean M	TC 43		Product code 452050-DE02 Page: 8/1
Version 2:02 Date of issue	5 January 2017	Format	United Language ENGLISH Kingdom (UK)

ulation (EC) No. 1907/2006 (REACH). Annex II, as amended by Commission Regulation (EU) 2015/830 SECTION 12: Ecological information 12.5 Results of PBT and vPvB assessment Not applicable. Not applicable. 12.6 Other adverse effects No known significant effects or critical hazards. SECTION 13: Disposal considerations. The information in this section contains generic advice and guidance. The list of Identified Uses in Section 1 should be for any available use specific information provided in the Exposure Scenano(s). 13.1 Waste treatment methods Product Methods of disposal Hazardous waste Yes. European waste catalogue (EWC) Waste designation Waste code 12 03 01* aqueous washing liquids 12 03 01" aguerous washing liquids However, deviation from the intended use and/or the pre disposal code to be assigned by the end user. Packaging Methods of disposal Where possible, arrange Where possible, arrange for product to be recycled. Dispose of via an authorised person/ licensed easte disposal contractor in accordance with local regulations. lowered wate disposal contractor in accordance with local regulations. European waste catalogue (EWG) packaging containing residues of or containinate of by hazaratious substances. This material and its container must be disposed of in a safe way. Care should be taken when handling emplified containers that here not feers detended or inseed out. Entryls containers or inless may retain some product residues. Europy containers represent a fire hazard as they must contain flammable product residues and support flames in one product residues. Europy containers represent a fire hazard as they must contain flammable product residues and support flames wells, folder on those entryls containers. Around dispersal of split material and numbit and contact with soil, waterways, drains and severes. Waste code SECTION 14: Transport information

	ADRIRID	ADN	IMDS	IATA
14.1 UN number	Not regulated.	Not regulated	Not regulated.	Not regulated.
14.2 UN proper shipping name				-
14.3 Transport hazard class(es)		•	+	+
14.4 Packing group	-	-	+	+
14.5 Environmental hazards	No.	No.	No	No.
Additional				

14.7 Transport in bulk according to Annex 8 of Marpol and the IBC Code

Not available

Product name	Techniciean MTC 43		Product code 4	452650-DE02	Page: 9/17
Version 2.02	Date of Issue 3 January 2017	Format	United Kingdom (UK) (United Kingdom	Language	ENGLISH

```
Conforms to Regulation (EC) No. 1907/2006 (REACH). Annex II. as amended by Commission Regulation (EU) 2015/830
SECTION 15: Regulatory information
   13.1 Safety, Nath and environmental regulation 
LIJ Regulation (I C.) No. 1907/2005 (OE ACH) 
Annex XIV. List of substances subject to auth 
Substances of very high nesseers 
Nove of the components are listed. 
Compare regulations. 
RELACH Status 
unem requirem.
                                                                                                                                                The company, as identified in Section 1, selfs this product in the EU in compliance with the current requirements of REACH.
         United States inventory
(TSCA 80)
Australia inventory (ACS)
Canada inventory (ICCSC)
Japan inventory (ICCSC)
Apan inventory (ICCSC)
Recea inventory (KECI)
Philippines inventory
(PICCS)
                                                                                                                                                All components are listed or exempted.
                                                                                                                                                All components are tisted or exempted.
   15.2 Chemical safety
                                                                                                                                             This product contains substances for which Chemical Safety Assess:
                                                                                                                                       ADN in European Provisions concerning the International Carriage of Dangerous Goods by Intanol Waterway.

ADN in European Provisions concerning the International Carriage of Dangerous Goods by Intanol Waterway.

ADN in The European Agreement concerning the International Carriage of Dangerous Goods by ADN in The European Agreement concerning the International Carriage of Dangerous Goods by ADN in The International Carriage of Dangerous Goods by ADN international Analysis Service CAB - Chemical Safety Assessment

CES - Chemical Safety Assessment

CES - Chemical Safety Assessment

DAEL + Derived No Effect Level

DINLL + De
 SECTION 16: Other information
                                                                                                                                                                                                                                                                                                                                       Product code 462650-DE02 Page: 10/17
```

Version 2.02

Date of Issue 3 January 2017

Format United Kingdom (UK) (United King

Language ENGLISH

tion (EC) No. 1907/2006 (REACH). Annex II, as amended by Commission Regulation (EU) 2015/830

SECTION 16: Other information

| Commetion | Varies | may contain one or more of the following | 01316-08-2 / RRN 01-211948094-11, | |
101316-70-6, | 101316-71-6, | 101316-72-7 (RRN 01-211948090-00, | 6474-480-4 (RRN 01-211948090-00, | 6474-480-4 (RRN 01-211948070-3, | 6474-68-4 (RRN 01-219480-3, | 6474-68-4 (RRN 01-219480-3, | 6474-68-4 (RRN 01-2194800-3, | 6474-68-4 (RRN 01-2194800-3

Harmful if swallowed Harmful in contact with skin. Causes skin initiation. Causes senous eye dramage. Causes senous eye critation. Harmful if inhaled. Very toxic to aquatio life with long lasting effects. H302 H312 H315 H310 H319 H332 H400 H410

H410
Acute Tox. 4, H302
Acute Tox. 4, H312
Acute Tox. 4, H332
Acute Tox. 4, H332
Acute Tox. 1, H400
Aquatic Chronic 1, H410
Eye Brit 2, H310
Skin Int. 2, H315 Very base to aquate life with long lasting effects.

ACUTE TOXICITY (long): Calegory 4

ACUTE TOXICITY (long): Allegory 4

ACUTE TOXICITY (long): Calegory 4

ACUTE ACUTE (long): Calegory 4

ACUTE ACUTE (long): Calegory 1

ACUTE ACUTE (long): Calegory 2

ACUTE ACUTE (long): Calegory 2

SERIOLS EVE DAMAGETE! IRATIATION - Calegory 2

SHIN CORROSIONIRRITATION - Calegory 2

Skin left. 2, H315 SKIN CORROS

Date of issue/ Date of 03,01,0017.

revision

Date of previous issue 23/12/0016.

Propared by Product Semandaria

Findcates information that has changed from previously issued version.

Motice to practice.

crises to reader.

All reasonably practicable steps have been taken to ensure this data sheet and the health, safety and environmental information contained in it is accurate as of the data specified below. No warranty or representation, express or implied is made as to the accuracy or comprehenses of the data and information in this data sheet.

The data and advice given apply when the product is sold for the stated application or applications. You should not use the product other than for the stated application or applications without seeking advice from BP Group.

It is the user's obligation to evaluate and use this product safely and to comply with all applicable lases and regulations. The IDP Group shall not be responsible for any stamage or nijery resulting from use, other than the stated product use of the material, from any failure out other to recommendations, or from any failure or other to the product for supply to a third party for use at user, have a clury to take all necessary steps to ensure that any person handling or using the product in produced the information in this sheet Employees have a daily to take any to result and only person handling or using the product in produced with the information in this lises it makes the Employees have a daily to take employees and others who may be affected of any hazardis described in this sheet and of any productions that should be taken. You can contrast the EP Group to ensure that they continued to the contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast that they can be contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast that they can be contrast the EP Group to ensure that they can be contrast that they can be contrast that they can be contrast the EP Group to ensure that they can be contrast the EP Group to ensure that they can be contrast that they can be contrasted to the contrast that they can be contrasted to the contrast that they

Product name	Technidean MTC 43		Product code 45	2050-DE02	Page: 11/17
Version 2.02	Date of Issue 3 January 2017	Format	United Kingdom (UK) (United Kingdom)	Language	ENGLISH



Annex to the extended Safety Data Sheet (eSDS)

Identification of the substance or mixture 462650-DE02 Code Product name Techniclean MTC 43

Section 1; Title

Short till of the exposure sceening. Use of lubricants and greases in open systems - industrial sceening. List of use descriptors. Identified use name: Use of lubricants and greases in open systems. Identified use name: Use of lubricants and greases in open systems-industrial Process Category: PROCOS, PROCO

Processes and activities covered by the exposure scenario

Covers use of lubricants and greases in open systems, including application of lubricant to work pieces or equipment by dipping, brushing or spraying (without exposure to heat); e.g. mould releases, correction protection, silderways, includes associated product storage, material transfers, sampling and maintenance activity.

Section 2 Operational conditions and risk management measures

Section 2.1 Control of worker exposure

Product characteristics: Physical state. Concentration of substance in product.

through state of substance in product.

Covers use of substance in product.

Covers use of substance in product.

Covers use of substance in product up to 100 % (unless stated discovers) and divastion of use:

Covers day exposures up to 8 hours

or onsitions affecting workers exposure:

Assumes use an offeren than 2012 door ambient temperatures stated differently. Assumes a good basic standard of occupancial trypiane; is implementated to the covers of the cove

Controlluring scenarious - uperaconario contamons and raw management incusares. The following influentiation provides infilmitum risk management measures for the contributing scenarios identified within this lubroant use group. However, more detailed information on control measures e.g. specific glove types may be occurrented in Section 8 of the main body of this safety cats sheet. Please review Section 8 in conjunction with the information on this Generic Exposure Scenario.

General measures applicable to all activities: Ayroid direct skin contact with pressure blenety potential areas for indirect skin contact. Wear gloves (restrict to EN 274). If hand contact with substance (likely. Claim up contamination/spin as soon as they cour. Wish off any skin contamination immediately. Provide haske employee making to preventionishine exposures and to report any skin problems that may develop. Other skin protection measures such as impensions suit and face shields may be required during find disspersion accities which are likely to lead to substantial aversor levelow, e.g. sprzyving.

Material transfers Manual: Avoid carrying out activities involving exposure for more than 1 frour

Material transfers Automated process with (semi) closed systems: Ensure material transfers are under containment or extract vential

Spraying.
Carry out in a wented booth or extracted enclosure.

Treatment by disping and pouring:
Provide a pool standard of controlled versillation (10 to 15 air changes per hour). Wear chemical pleases to EN374 in combination with specific activity training.
Technolican MTC 43

Use of fubrishmes and gre

Use of lubricants and greases in open systems

12/17

April 2025

Equipment distanting and maintenance. Draw down spales price is exclusive a good standard of general ventilation (not less than 50 of company on the investment of contraction and spales). Their diversity developes (exclusing one found in the article diversity divers

Section 2.2: Constrol of environmental exposure
Applicability domain: product in which the risk determining substance
has the following hazard snottler.
Logidine.
Vapour pressure:
PREP Prestinator aguate range (mig.L.):

Amounts used:
Ell termage of risk determining substance
party year:
Frequency and distriction of use;
Emission days:

Other conditions affecting emissions and releases fraction to air patter typical consist in Editions and releases to solic.

Organisational measures to prevent release:
Lethinizad on site on editions and measures to reduce or limit discharges, air emissions and releases to solic.

Organisational measures to preventifient.
Intelease from site.

Organisational measures to preventifient.

Intelease from site.

Organisational measures to preventifient.

Intelease from site.

Organisational measures to preventifient.

Intelease from site.

No data available yet

Maximum allessable site tomage (Muc.)

Maximum allessable site tomage (Muc.)

Based on release following total wastewater

Fresident from range of measures and produces of waste should comply with approach to a finite and to maximum

Use of lubricants and greases in open syst finds	43

Section 3: EXPOSURE ESTIMATION AND REFERENCE TO ITS SOURCE

Exposure estimation and reference to its so	urce - Environment
Exposure assessment (environment):	Used ECETOC TRA model (May 2010 release)
Exposure estimation and reference to its so	uroe - Werkers
	The ECETOC TRA tool has been used to estimate workplace

Section 4: Guidance to check compliance with the exposure scenario

Environment	Guidanos is based on assumed operating operations within may not be applicable on all sites: thus, socializing may be necessary to define appropriate alteracyclic risk miningement measures. Further details, or scaling and necessaries technologies are provided in SEREC database if scaling reveals a condition of unballe size (i.e., RCRs > 1), adolborul RMMs or a threspect of chemical series, assessment is required. For further information were ATRES, oppREACH, OES
Health	Where other risk management measures/operational conditions are adopted, then users should ensure that risks are managed to at least equivalent levels.

Techniciean MTC 43 Use of Aubricanus and greases in open systems in the control of the control o



Annex to the extended Safety Data Sheet (eSDS)

Identification of the substance or mixture Product definit

462650-DE02 Code Product name Techniclean MTC 43

Section 1: Title

Use of lubricants and greases in open systems - Professional sostiation. List of use descriptors. Identified use name: Use of lubricants and greases in open systems - Professional sys

Identified use name: Use of Libricants and greases in open systems-Professional Process Category: PROCO2, PROCO2, PROCO2, PROCO1, PROCO1, PROCO1, PROCO1, Sector of end user Su22. Subsequent service life relevant for that use: No. Environmental Release Category: RCO2s. RECO26 Specific Environmental Release Category: ATIEL/ATC SPERC 8.Cp.u1

Assessment Nethod

Covers use of lubricants and greases in open systems, including application of lubricant to work pieces or equipment by dipping, brushing or spraying (without exposure to heat), e.g. mould releases, comotion protection, sideways, includes associated product storage, material transfers, sampling and maintenance activities.

Section 2 Operational conditions and risk management measures

Section 2.1 Control of worker exposure

Section 2.1 Control of worker exposure
Physical state:

Lquid: vapour pressure < 0.5 kPa

Amounts used.

Covers use of substance/product up to 100 % junless stated differently)

Frequency and duration of use:

Other conditions affecting workers exposure:

Assumes use at not more than CPTO above ambient temperature, unless stated differently

Assumes use at not more than CPTO above ambient temperature, unless stated differently

Contributing scenarios: Operational conditions and risk management measures

Contributing scenarios: Operational conditions and risk management measures

Contributing ocenarios: Operational conditions and risk management measures

General imasures applicable to all activities. Avoid direct skin contact with product, benefit potential areas for indirect
son contact. Wise provise strate to by 174 (i) hand contact with product, benefit potential areas for indirect
son contact. Wise provise strate to by 174 (i) hand contact with substance likely, Cleans to potential and son contact
with product and the product and son the product of the product of the product and son the product of the product o

Techniclean MTC 43

Use of lubricants and greases in open systems

15/17

Section 2.2: Control of en Applicability domain: product in which the risk determining substance has be following hazard profile:
Logicon
Logicon
PORTION PROMISSION OF THE PROFILE PROFILE PROFILE PROFILE PROFILE PROFILE PROFILE PROFILE PROFILE PROF Amounts used:

Frequency and duration of use:

Emission days

Environment factors not influenced by rink
management.

Local frechwater districts faster
Local marine water districts faster
Reposition.

Release Fraction to air patter typical onsite
Release fraction to air patter typical onsite
Release fraction to sair farm experient.

Release fraction to sair farm experient. rater emissions as process operates without wa Rollates | Release fraction to soil from process (after | E-O3 typical crisite RMMs) |
Release fraction to wastewater from process No data available yet (after typical crisite RMMs and before yet ago brustnere) plan |
see ago brustnere) plan |
common practices van crisis |
common practices van release: schmiss an else summisses seed.

schmiss an else somfiliers and measurers reduce or limit discharges, air emissions di relevante so som discharges, air emissions di relevante so con la r Organisational measures to prevent/finit release from site: Conditions and measures related to sewage treatment plant: Estimated substance removal from wastewater via on site sewage treatment Maximum allowable site tennage (Mana) based on release following total wastewater treatment removal No data available yet realment removal ditions and measures related to external timem of waste for disposal: ditions and measures related to external overy of waste. External treatment and disposal of waste should comply with applicable local anoise national regulations. External receivery and recycling of waste should comply with applicable local anoise national regulations.

Section 3: EXPOSURE ESTIMATION AND REFERENCE TO ITS SOURCE

Exposure estimation and reference to its so	ource - Environment
Exposure assessment (environment):	Used ECETOC TRA model (May 2010 release)
Exposure estimation and reference to its so	ource - Workers
Exposure assessment (human):	The ECETOC TRA tool has been used to estimate workplace exposures unless offerwise indicated.

Environment	Dudance is based on assumed operating conditions which may not be applicable to all siles. Inst. soaling may be received in define appropriate site-approfic risk management measures. Further details on scaling and control technologies are proteided in SPIR flat fastbase if scaling reveals a condition of unable use (i.e., RUDS > 1), additional RMMs or a late-specific chemical safety assessment is recurse. For further information see wires ATIEL, orp REACH_OLD.		
Techniclean MTC 43	Use of lubricants and greases in open systems - Professional		


Table of Fuses for 400V Units


Fuse	Phases	Rated Voltage	Rated Current	Frequency	Dimensions	Tripping Characteristic	Location
F1	1	250V	3.15A	50/60 Hz	5x20 mm	fast acting	Distribution board
F2	1	250V	3.15A	50/60 Hz	5x20 mm	fast acting	Distribution board
F3	1	250V	3.15A	50/60 Hz	5x20 mm	fast acting	Distribution board
FS1	1	250V	4A	50/60 Hz	5x20 mm	fast acting	24VDC Power supply
F101	1	500V	16A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	fast acting	Generator
F102	1	500V	16A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	fast acting	Generator
F103	1	500V	16A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	fast acting	Generator
F104	1	500V	0.5A	50/60 Hz	6.3x32 mm - 1/4" x 1-1/4"	fast acting	Generator
F105	1	500V	0.5A	50/60 Hz	6.3x32 mm - 1/4" x 1-1/4"	fast acting	Generator
F106	1	500V	0.5A	50/60 Hz	6.3x32 mm - 1/4" x 1-1/4"	fast acting	Generator


Table of Fuses for 480V Units


Fuse	Phases	Rated Voltage	Rated Current	Frequency	Dimensions	Tripping Characteristic	Location
F1	1	250V	3.15A	50/60 Hz	5x20 mm	fast acting	Distribution board
F2	1	250V	3.15A	50/60 Hz	5x20 mm	fast acting	Distribution board
F3	1	250V	3.15A	50/60 Hz	5x20 mm	fast acting	Distribution board
FS1	1	250V	4A	50/60 Hz	5x20 mm	fast acting	24VDC Power supply
F7	1	600V	1.5A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	time lag	Transformer input
F8	1	600V	1.5A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	time lag	Transformer input
F101	1	600V	15A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	fast acting	Generator
F102	1	600V	15A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	fast acting	Generator
F103	1	600V	15A	50/60 Hz	10x38 mm - 13/32" x 1-1/2"	fast acting	Generator
F104	1	500V	0.5A	50/60 Hz	6.3x32 mm - 1/4" x 1-1/4"	fast acting	Generator
F105	1	500V	0.5A	50/60 Hz	6.3x32 mm - 1/4" x 1-1/4"	fast acting	Generator
F106	1	500V	0.5A	50/60 Hz	6.3x32 mm - 1/4" x 1-1/4"	fast acting	Generator

Wiring Diagrams

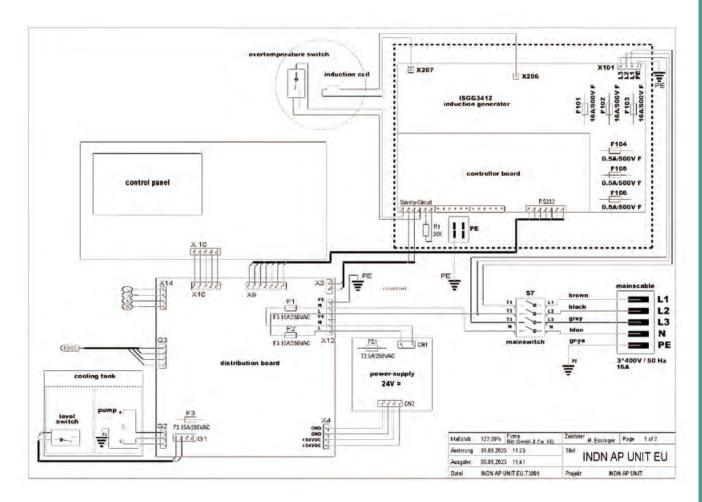


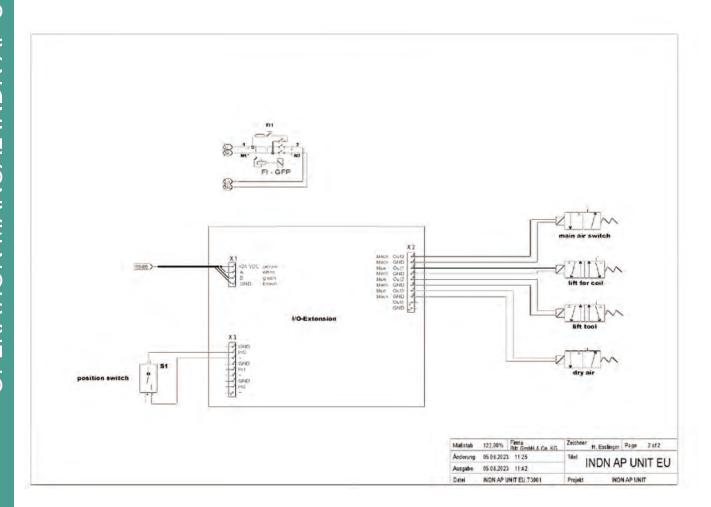

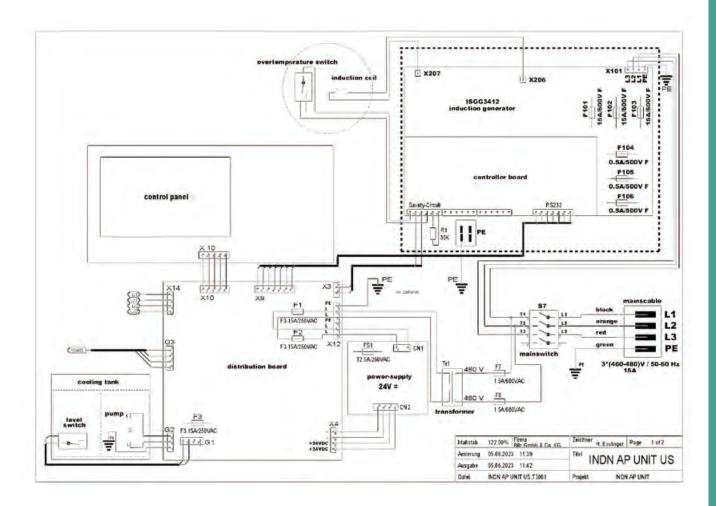

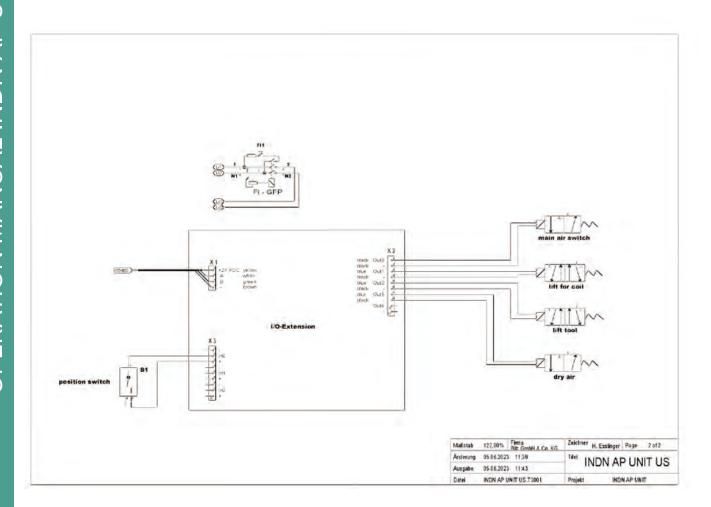

Pneumatic Diagrams

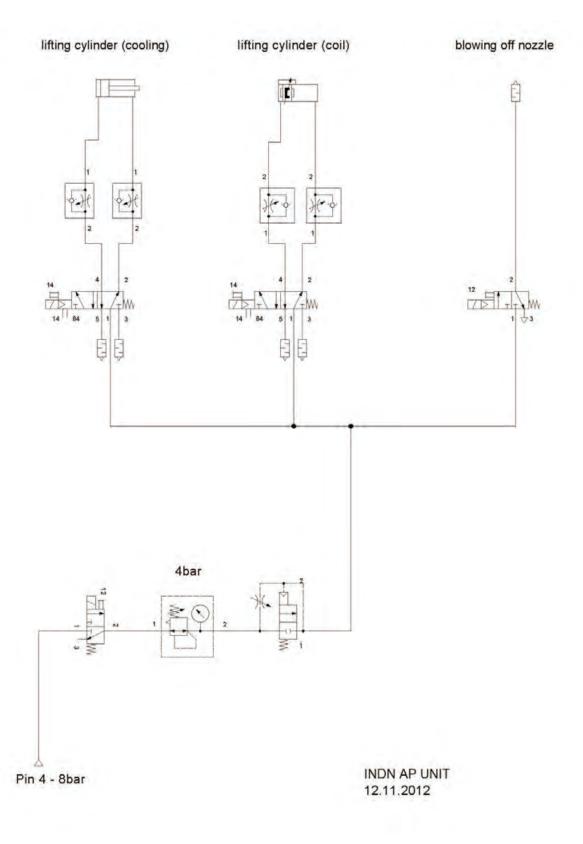

April 2025 3450612